

Chief Architect Viewer X18

Professional 3D Home Design Software



Reference Manual

A description of the software interface, including drawing tools and settings.

Chief Architect, Inc
6500 N Mineral Dr
Coeur d'Alene, ID 83815
www.chiefarchitect.com

6/23/2026

© 1990–2025 by Chief Architect, Inc. All rights reserved.

No part of this documentation or accompanying software may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system, without permission in writing from Chief Architect, Inc.

Chief Architect® is a registered trademarks of Chief Architect, Inc.

This software uses the **FreeImage open source image library**. FreeImage is used under the FIPL license, version 1.0. See <https://freeimage.sourceforge.net> for details.

This software uses the **Ruby open source library**. See www.ruby-lang.org for details.

This application incorporates **Teigha® software** pursuant to a license agreement with Open Design Alliance. Teigha® Copyright © 2003-2018 by Open Design Alliance. All rights reserved.

3D input device development tools and related technology are provided under license from **3Dconnexion**. © 3Dconnexion 1992 - 2018. All rights reserved.

The **Sentry Spelling-Checker Engine** © 1994–2003 Wintertree Software Inc.

This software contains source code provided by **NVIDIA Corporation**.

This software uses **Open CASCADE Technology**. See <https://www.opencascade.com> for details.

This software uses **Lib3DS**.

Open CASCADE Technology and Lib3DS are both used under the GNU Lesser General Public License version 2.1.

This software uses the **OpenCOLLADA SDK**. Copyright © 2008-2012 NetAllied Systems GmbH, Ravensburg, Germany.

PDFium, Blake3, Intel®'s Embree library, and Intel® Open Image Denoise are all used under the Apache License version 2.0.

This software uses **AMD FSR/RCAS** under the MIT License.

This software uses **Precomputed Atmospheric Scattering**. Copyright © 2017, Eric Bruneton. All rights reserved. See https://github.com/ebruneton/precomputed_atmospheric_scattering for details.

This software uses the **OpenVR SDK**. Copyright © 2015, Valve Corporation. All rights reserved. See <https://github.com/ValveSoftware/openvr> for details.

This software uses the **OpenCV open source computer vision library**. See <https://www.opencv.org> for details.

Precomputed Atmospheric Scattering, OpenVR, and OpenCV are all used under a 3-clause BSD License.

This software uses the **PDFium** PDF renderer, which is licensed under a three-clause BSD license and the Apache License version 2.0. Copyright 2014 PDFium Authors. All rights reserved.

This software uses **Blake3** which is dually licensed as public domain under the Creative Commons Zero v1.0 Universal code and under the Apache License.

This software uses **Intel®'s Embree library**. See <https://github.com/embree/embree> for details.

This software uses **Intel® Open Image Denoise** which is part of the Intel® oneAPI Rendering Toolkit. All rights reserved. See <https://www.openimagedenoise.org/> for details.

All other trademarks and copyrights are the property of Chief Architect, Inc. or their respective owners.
Created in the United States of America.

Cover house designed by Michael Rust - Architect LLC.

Contents

Copyrights	2	Arrow Lines	48
Program Overview	5	Editing Polylines	48
Dashboard	5	Line/Polyline Specification Dialog	49
The Chief Architect Environment	7	Deleting Objects	51
Using Input Devices	8	Multiple Floor Levels	52
Menus, Toolbars, and Hotkeys	10	Displaying Floor Levels	52
Dialogs	11	The Current Floor	52
Edit Handles	12	The Reference Display	53
The Status Bar	13	3D Views	54
Message Boxes	14	Camera Defaults Dialogs	54
Viewing a Plan	14	3D View Tools	55
Measuring Objects	16	Creating Camera Views	55
Viewing a Layout File	16	Creating Overviews	56
Getting Help	16	Cross Section/Elevation Views	57
About Chief Architect	17	Displaying 3D Views	58
File Management	18	Navigating in Camera Views	60
Compatibility with Other Programs	18	Gamepad Settings Dialog	64
Opening Plans and Layouts	18	Editing 3D Views	66
Exporting Pictures	19	Virtual Reality	68
Exporting Metafiles	20	Saving and Printing 3D Views	72
Importing and Exporting Projects	21	Camera Specification Dialogs	73
Chief Architect Viewer Data	24	Cross Section/Elevation Specification Dialogs	76
Auto Archive	24	3D Rendering	78
Undo and Redo	25	Rendering Effects	78
Exiting Chief Architect	26	Lighting Modes	79
Window and View Tools	27	Rendering Techniques	79
View Windows	27	Rendering Technique Options	80
Plan Views	27	Printing	83
Working in Multiple Views	28	The Printing Tools	83
View Tools	30	Print Preview	83
Zoom Tools	30	Printing Across Multiple Pages	84
Fill Window	31	Printing to a PDF File	84
Panning the Display	31	Print View Dialog	85
Closing Views and Files	32	Print Image Dialog	87
Displaying Objects	34	Index	90
Display Layers	34		
Layer Display Options Dialog	34		
Layer Sets	35		
Display Toggles	35		
Select Color Dialog	36		
Text	38		
Fonts and Alphabets	38		
The Text Tools	39		
Creating Text	39		
Displaying Text Objects	40		
Rich Text Specification Dialog	40		
Selecting Text Objects	43		
Editing Text	44		
Copying and Pasting Text Objects	46		

Program Overview

Chapter 1

Chief Architect Viewer can be used to view and add commentary to Chief Architect drawings in either plan or layout file format, facilitating the communication process between design professionals and their clients. Chief Architect Viewer offers many useful features:


- Open and explore plan and layout files created by Chief Architect software.
- Modify the display of the plan to see more or less detail.
- Create 3D views of the full model.
- Add notes to the drawing for review by your design professional.
- Print from any view.
- Export views as either picture files or Windows metafiles for use in other programs.

If you would like to learn more about Chief Architect, select **Help> Visit Chief Architect Web Site**  from the program menu.




Dashboard

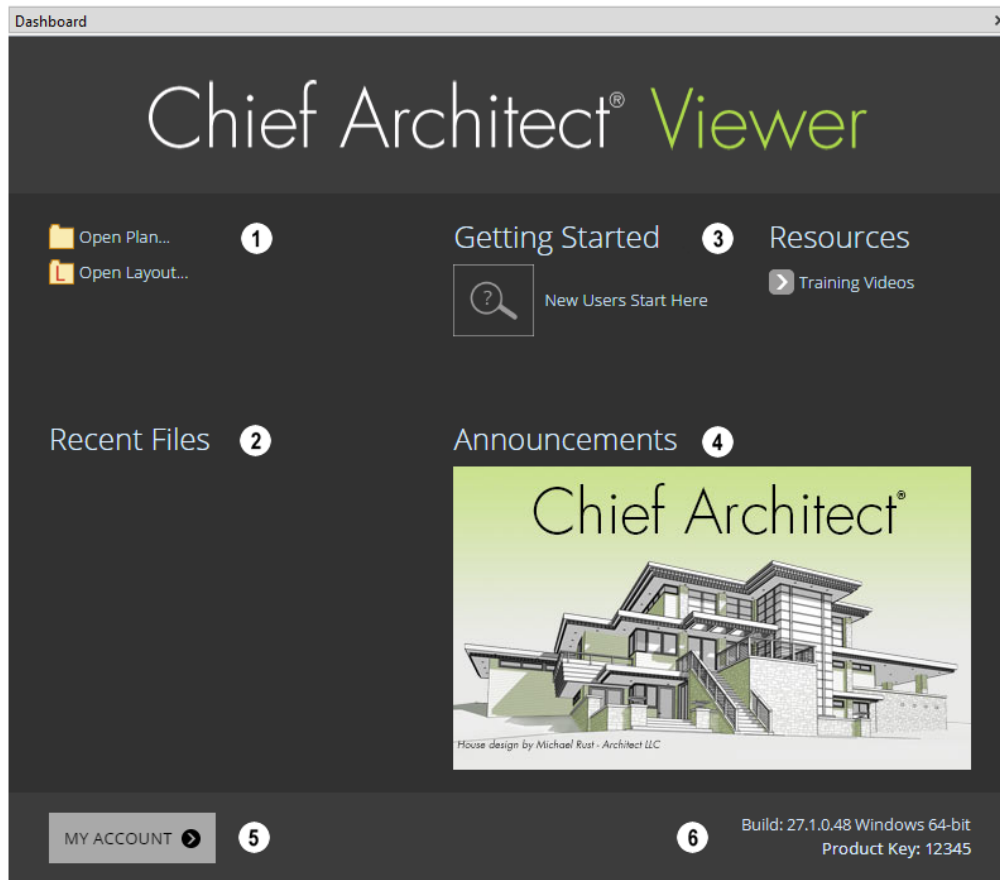

When Chief Architect is launched, the Dashboard window displays, allowing you to choose how you want to begin working in the program or access useful resources. The Dashboard can also be opened at any time by selecting **File> Dashboard**.





1 New/Open

-   Choose **Open Plan** or **Open Layout** to open, view, and annotate a plan or layout file. See *Opening Plans and Layouts on page 18*.
-  Click **Import Project** to add the documents in a .caproj file to your Resource Store and open one of them. See *Importing and Exporting Projects on page 21*.

2 Recent Documents

The full file paths of the most recently opened Plans and Layouts are listed here. See *Opening Plans and Layouts on page 18*.

- Move your mouse pointer over a document name to see its full file path.
- Click the **Pin File**  icon to the right of a document's name to pin it to the top of the Recent Documents List regardless of how recently it was opened. Click the **Unpin File**  icon to return the document to its normal place in the list.
- Click on a Plan or Layout's name to open that document.

3 Getting Started & Resources

A selection of useful online **Getting Started** options and **Resources** are available here. Click on an option to launch your default internet browser to chiefarchitect.com.

- Click **Getting Started** to visit the Getting Started page on our website with links to a variety of resources to help you begin using the program.

- Click **Training Videos** to access a searchable collection of videos focused on specific topics.

4 Announcements

When an internet connection is available, the **Announcements** section displays updated messages and news from Chief Architect.

5 My Account


Click **My Account** to launch your default internet browser to the My Account page on our website. If you are not currently signed in, you will instead go to the Sign In page.

6 Build

Your software version's **Build** number displays here for reference.

The Chief Architect Environment

Chief Architect is designed to be intuitive and efficient.

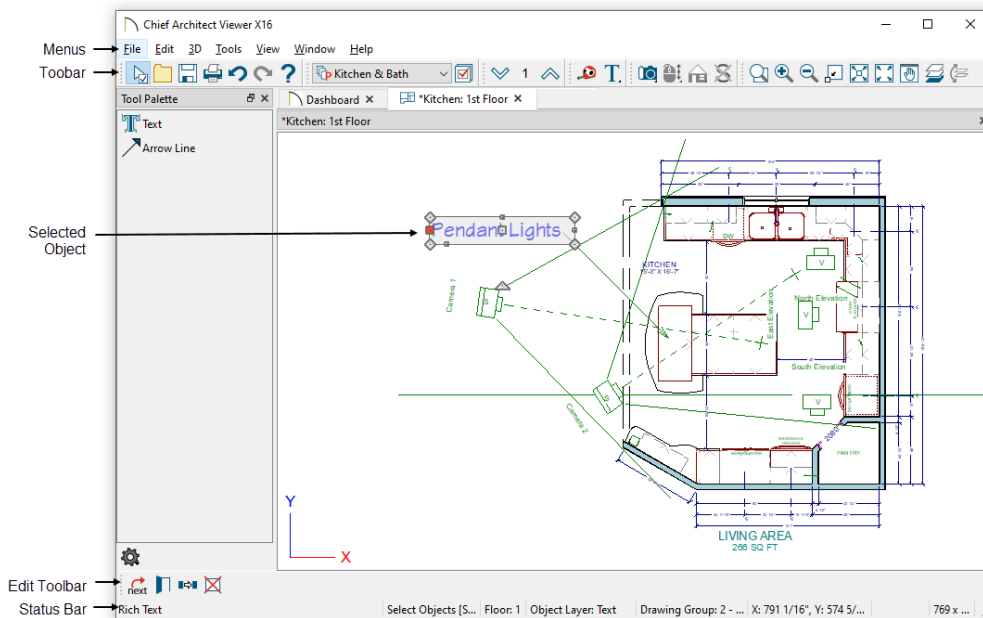

3D DRAFTING

In Chief Architect, the drawing area is laid out on a Cartesian grid: a three dimensional coordinate system described using the X, Y, and Z axes. A Coordinate System Indicator displays at the bottom left corner of most views, and the current position of your mouse pointer displays in the Status Bar at the bottom of the program window. See [View Windows on page 27](#).

Architectural objects take up space in all three dimensions and their height, width and depth can be specified in U.S. or metric units. In addition, the location of objects can be precisely defined using coordinates, again specified in U.S. or metric units.

EASY ACCESS TO TOOLS


You can access Chief Architect’s features in various ways using the mouse and keyboard.

- The program’s tools are accessed using the menus and toolbar buttons.
- Keyboard shortcuts are available for most tools.
- Contextual menus display with a right-click of the mouse.
- *The Status Bar on page 13* at the bottom of the screen provides tool descriptions and other information about the current task.


INTERFACE TOGGLES

A number of useful drawing and editing behaviors, as well as the display of important elements in the interface, can be easily enabled and disabled using the menus.

 When a setting is turned on, or a tool is selected, its icon will be shaded and a small check is displayed at its lower right corner. In Windows, but in MacOS™ only a large check will be displayed to the left of the icon.

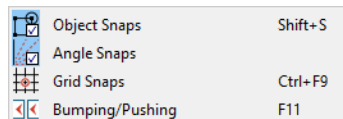

Menu in Windows

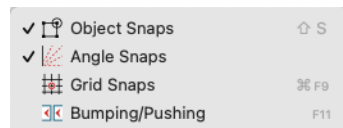

Menu in MacOS™

Using Input Devices

You can interact with Chief Architect using a variety of input devices.

KEYBOARD

A keyboard is necessary for entering text and size values. See *Dialogs on page 11*.

Your keyboard can also be used to navigate dialog panels, as well as navigate the program menus. Many commands can also be invoked using keyboard hotkeys. See *Menus, Toolbars, and Hotkeys on page 10*.

In addition to the keyboard, a mouse or other device that can move a pointer is necessary in order to draw, select, and edit objects in your drawings.

THREE BUTTON MICE

Left Button



The **left button** is the primary button used in Chief Architect. Unless specified otherwise, Chief Architect documentation refers to the left mouse button.


Objects and most views are created by either clicking the left mouse button or by dragging the cursor in the direction of a desired view. The **Status Bar** at the bottom of the Chief Architect Viewer's main window indicates which tool is active.

Note: If you are left-handed and have re-programmed your mouse, reverse the instructions for left and right buttons in this manual.

Right Button



The **right button** has several uses:

- Right-click to select any object. If, for example, the **Full Camera**  tool is active, the left mouse button only allows you to click and drag to create 3D views or to select camera symbols. You can, however, select other types of objects such as text with the right mouse button.
- You can also use the right mouse button to open a context sensitive menu with additional editing commands. See [Contextual Menus on page 10](#).

Middle Button



The **middle button** can be used to pan in most view types. To close a tabbed view window, click on its tab using the middle mouse button. You can also program it to work as a double-click.

If your mouse does not have a middle mouse button, in the Mac version of Chief Architect you can use the left button and the Command key to achieve the same results.

Mouse Wheel



The **mouse wheel** can be used to zoom in and out in most view types. See [Zoom Tools on page 30](#).

3D MICE

3Dconnexion®'s 3D mice can be used to navigate in Chief Architect. For information about navigating in camera views and overviews, see [3Dconnexion® 3D Mice on page 60](#).

TRACKPADS

In addition to the standard trackpad gestures on your system, in Chief Architect you can pinch to zoom.

In macOS™, you can Option + click to pan. Panning with a trackpad is not supported in the Windows version of the software, however.

TOUCH SCREENS

Standard one-finger touch screen gestures are supported in both the Windows and Mac versions of the software with one exception: double-tapping is not supported. In the Windows version, touching with a second finger to cancel an action is also supported, as are two-finger pan and two-finger pinch to zoom.

GAMEPADS

In the Windows version of Chief Architect, gamepads can be used to navigate in camera views, overviews, as well as elevation views. See [Gamepads on page 61](#).

CROSSHAIRS


✚ Crosshairs help you position the pointer relative to objects in a view while drawing and editing. They can be set to display in Plan and Elevation views. Select **View> Crosshairs** to toggle crosshairs on or off.

Menus, Toolbars, and Hotkeys

Chief Architect's drawing, editing, and view tools can be accessed via menus, toolbar buttons, and keyboard hotkeys.

PROGRAM MENUS

 
Chief Architect's program menus are located below the title bar in the program window and can be used to access nearly all tools in the program. Click on a menu name to expand it, then click on a menu item to either activate that tool or access the item's submenu. Items with a submenu have an arrow to the right of the name.

In the Chief Architect documentation, menu paths are written in this format: **Tools> Floor/Reference Display> Up One Floor** .

The menus can be accessed using the keyboard:

- Press the **Alt** key once to enable this functionality - one letter in each menu will become underlined.
- Press the key associated with one of these underlined letters to expand its menu - one letter in each menu item's name will be underlined. Press the key associated with one of these letters to activate that tool or access the item's submenu.
- Press the **Esc** key to undo your last selection, or click with the mouse to exit out of this functionality.

Menu items with an icon to their left have a toolbar button associated with them. In addition, many tools can also be activated using keyboard hotkeys. If a menu item has a hotkey, it will display to the right of the item's name.

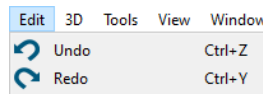

Edit menu items with button icons to the left and hotkeys to the right

TOOLBARS AND HOTKEYS


Chief Architect Viewer installs with a set of toolbars docked to the margins of the program window. Using these toolbar buttons is a fast and easy way to access many program features. If a tool is active, a small check mark will display at the lower right of its button icon.

The Edit Toolbar is a special toolbar with buttons that can be used to modify a selected object or objects. The buttons on this toolbar vary, depending on the type(s) of object selected, the current view, and how you selected the object; when no object is selected, the Edit Toolbar is blank. See [Using the Edit Tools on page 45](#).

CONTEXTUAL MENUS

Contextual menus are context-sensitive menus that display tools relevant to a selected object or view. To open a contextual menu, right-click on a text object. The options in an object's contextual menu are usually the same as those on an object's Edit Toolbar.

You can also access a contextual menu by right-clicking in an empty space in a view window, or in a text field in a dialog.

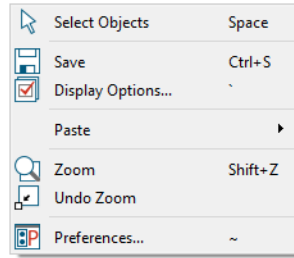

The Contextual Menu for a Plan View


Dialogs

Various functions in Chief Architect Viewer are accessed through dialog boxes.

SPECIFICATION DIALOGS



Each object that you can draw in Chief Architect Viewer has a unique specification dialog where you can enter size, style and other information specific to the selected object. To access it, select the object and click the **Open Object** edit button. See [Text on page 38](#).

You can also double-click on an object with the **Select Objects**  tool active to open its specification dialog. See [Selecting Text Objects on page 43](#).

In addition, you can access an active camera view's specification dialog by selecting **3D> Edit Active Camera** . The 3D View tools also have defaults dialogs where you can specify the initial attributes of camera views. See [3D Views on page 54](#).

NAVIGATING DIALOGS

Dialog panels and settings can be accessed using the mouse. You can also navigate the settings on a given dialog panel using the keyboard. For example:

- Line items in tree lists can be browsed using the arrow keys. **Up** and **Down** navigate the list, while **Left** and **Right** expand and contract categories.
- Press the **Tab** key to shift focus from the tree list to the first setting on the selected panel.
- Press the **Tab** key to shift focus from one setting to the next, or **Shift + Tab** to go in the reverse direction.
- A check box can be checked or cleared by pressing the **Spacebar** or the **+** or **-** keys, respectively, while it is in focus.
- Columns of radio buttons can be navigated using the **Up** and **Down** arrow keys; rows can be navigated using the **Left** and **Right** arrows. Select a radio button by pressing the **Spacebar** while it is in focus.
- Settings in list boxes can be navigated using the **Up** and **Down** arrow keys. When a check box is in focus, it can be checked or cleared by pressing the **Spacebar**.
- Drop-down lists can be browsed using the **Up** and **Down** arrow keys. When the mouse pointer is directly over the drop-down, the mouse scroll wheel can also be used; on a Mac, the list must also be expanded. In Windows only, you can press **Tab** to select the highlighted item in the list and proceed to the next setting.
- Settings with spin control arrows  can be adjusted by typing in the text field or using the **Up** and **Down** arrow keys. In most dialogs when the mouse pointer is directly over the setting, the mouse scroll wheel can also be used.
- Slider bars  can be adjusted by typing in the text field or using the **Left** and **Right** arrow keys. In most dialogs when the mouse pointer is directly over the slider bar, the mouse scroll wheel can also be used.

- Line items in tables can be navigated using the *Up*, *Down*, *Left*, and *Right* arrow keys.
- To expand a drop-down list in a table, navigate to it and press the *Spacebar*. Then, browse the list using the *Up* and *Down* arrow keys. Using the mouse, a drop-down list in a table must be clicked twice: first to select, then to expand the list.
- Line items in tables can be group selected using the *Ctrl* or *Shift* keys, or by pressing *Ctrl/⌘ + A*.
- Press the *Enter* key to close most dialogs and apply your changes.
- In the Mac version, *Command + .* closes dialogs.

Note: Keyboard navigation in dialogs may vary somewhat depending on your computer platform.

In the Mac version of the software, Dictation is supported in dialogs. Select **Edit> Start Dictation**, then open a dialog. Say the word “Numeral” before a number to enter it as a numeric value or immediately follow a number with a unit such as “foot” to enter it as a measurement.

Edit Handles

A selected object has edit handles that can be used to modify its size, position, and orientation. When you move the pointer over an edit handle, information about what it does displays in the Status Bar and the pointer changes to suggest how you can use it.

The edit handles that display depend on the type of object selected, the current view, and how far you are zoomed out. Edit handles do not resize as you zoom in or out. If you are zoomed out far enough, some edit handles may be hidden so that they do not stack over one another. As you zoom in, these handles become visible again.




You can cancel any edit handle operation before it is completed by pressing the *Esc* key or by pressing any two mouse buttons at the same time.

MOVE EDIT HANDLE



The square Move handle located at the center of a selected Text object or multi-segmented Arrow Line lets you move that object to a new location. When you position the mouse pointer over the Move handle, it displays a four-headed arrow. See [Editing Text on page 44](#).

Depending on the type of object(s) selected and how far you are zoomed in or out, the position of the Move handle may shift so that it remains on-screen. See [Zoom Tools on page 30](#).

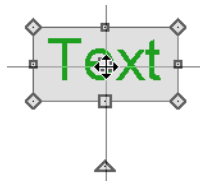


RESHAPE/RESIZE EDIT HANDLES




Square edit handles on the edges and corners of a selected object allow you to resize the object by moving its edges. A two-headed arrow indicates that the object's edge or corner can be moved in the direction of the arrows. When multiple objects are selected, the Resize handle is not available.

Depending on the type of object selected and how far you are zoomed in or out, the Resize handles may not display on-screen.

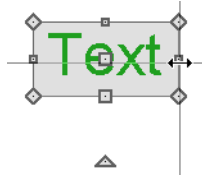


In the case of a selected Arrow Line, clicking and dragging the Resize edit handle will move the object perpendicular to itself.

ROTATE EDIT HANDLE

 The triangular Rotate handle lets you rotate the selected object or group of objects. The Rotate handle is located adjacent to either the object's selected edge or its front if it has one, and when you move your mouse pointer over this handle, it displays a circular arrow.

A selection's Rotate handle will display regardless of how far you are zoomed out; however, it is possible to zoom in far enough that it no longer can be seen.

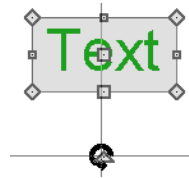

The Status Bar

The Status Bar is located at the bottom of the main program window and reports various information about the current state of the program.

This information depends on a variety of conditions such as the type of object(s) selected, and the current position of the pointer.

Examples of information that may be reported include:

- The type of object currently selected or the total number of group-selected objects.
- A description of the edit handle that the pointer is over.
- A brief description of the toolbar button or menu item that the mouse pointer is positioned over.
- The name of the active tool, a brief description of that tool, and its keyboard hotkey, if it has one.
- The length and/or angle of an object as it is being drawn.
- Basic information about a selected library object, folder, or catalog.
- The current floor level or layout page.
- The layer that the selected object is on and its Drawing Group.
- The size of the active window in pixels.
- Whether a camera view is rendering or has finished rendering.
- The current coordinates of the pointer.

Message Boxes

As you work in Chief Architect, the program will occasionally prompt you to examine your settings, alert you if you command it to do something that could potentially cause a problem, or notify you if it encounters a problem that needs your attention.

Situations where such message boxes may display include:

- Closing a file or view without saving;
- Modifying an object that is set to rebuild automatically;
- A file referenced outside the program, such as an image or texture, is missing

As with dialog boxes, you can access the options in a message box using the mouse or navigate them using the keyboard.

A few messages have a **Send Report** button. Click this button to send details regarding the issue that prompted the message to Chief Architect via the internet.

Some message boxes include a “Remember my choice” or a “Do not show this again” check box. Check this box to prevent messages of this specific type from displaying in the future. When this box is checked, some options in the message box may become inactive.

To allow all message boxes to display again, select **Help> Reset Message Boxes**.


TOAST NOTIFICATIONS

Temporary toast notifications display at the bottom right corner of the program window to notify you when certain tasks are completed. Icons on the right side of the toast let you display the message in a regular message box or close the toast. Some toast notifications can be suppressed: click its **Expand** button and check **Do not show this message again**.


Viewing a Plan

You can see a model in a variety of different 2D and 3D views. You can display more than one view at a time; and in any view, you can pan or zoom in or out. See [Window and View Tools on page 27](#).


Plan view is a 2D view of the model. Each floor level displays separately; however, you can control which objects display at any given time; can easily switch between floors; and can also display items on a second floor for reference. See [Multiple Floor Levels on page 52](#).

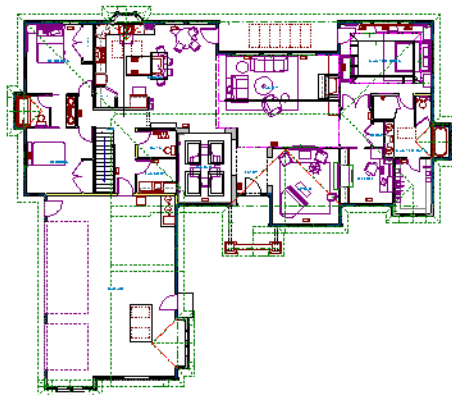


You can create interior and exterior 3D views of a model from any perspective. As in plan view, you can control which objects are visible. See [3D Views on page 54](#).

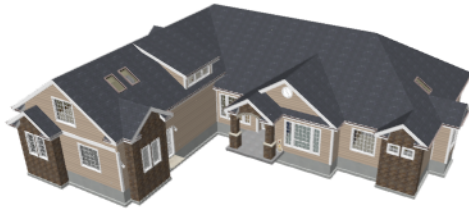

You can also create **Floor Overviews** that show only the current floor plus any floors beneath it. Ceilings on the current floor are omitted so you can see the interior, visualize the relationships between spaces, and plan traffic flow.

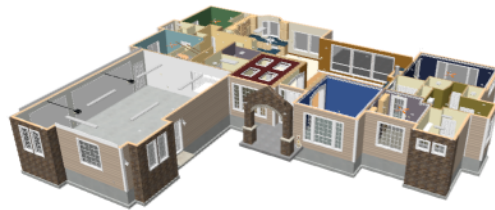


Framing Overviews display framing in 3D, provided that framing has been built. You can customize 3D views to serve special purposes such as this.

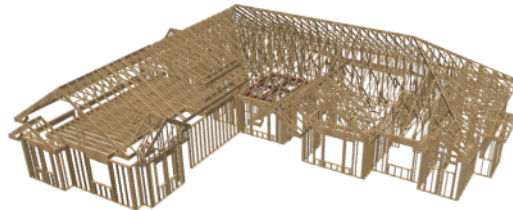

LAYOUT FILES

Layout files are separate from plan files and contain views of a design arranged on pages for construction documentation. See [Opening Plans and Layouts on page 18](#).

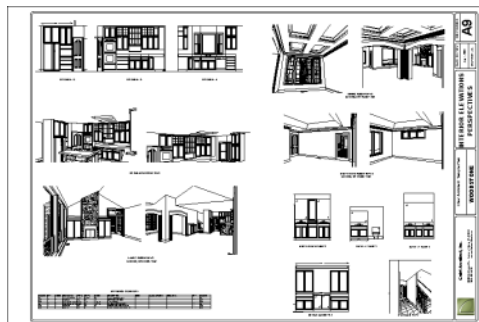


All views can be exported as a graphic image. See [To export a picture on page 20](#).

Measuring Objects

Plan files often have dimension lines drawn in them to show the lengths of walls and other features. If you would like to measure a distance that is not reported by a dimension line, you can use the Tape Measure tool.

TAPE MEASURE


 Use the **Tape Measure** tool to draw a temporary dimension line between any two points in the drawing area. The tool will place temporary markers at the start and end points of the dimension line. The Tape Measure line and its start and end points all disappear when you release the mouse button.

Although you can use the Tape Measure tool in layout files, bear in mind that the views on layout pages are scaled while the Tape Measure tool's measurements are not. For best results, therefore, use this tool in plan views or cross section/elevation views rather than in layout. See [View Windows on page 27](#).

Viewing a Layout File


Layout files allow you to preview construction documents before they are printed. Each layout file typically contains many pages, each with one or more plan view, cross section/elevation view, perspective view, or detail.

THE CURRENT PAGE

 The current layout page is indicated at the center of the Layout Page Up/Down buttons.

There are a number of ways to navigate from one layout page to another:

- Click the arrow buttons on either side of the **Layout Page** button to navigate to the Previous or Next page.
- Click the **Current Page number** between the arrows to open the Go To Layout Page dialog. Enter a page number and click **OK**.

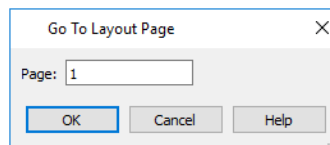

- Select **Tools > Layout Page > Page Up** or **Page Down**.
- Press **Shift + N** (Page Up) or **Shift + M** (Page Down).

You can add Text and Arrow Lines to layout pages just as you can to plan views. See [Creating Text on page 39](#).

Getting Help

 There are many forms of help available in Chief Architect including: Tool Tips, the Status Bar, and the online Help menu.

All these forms of help assume you have a basic working knowledge of your operating system, including how to use a mouse, open, close and save files, copy, paste, and right-click to access contextual menus. Help also assumes you are familiar with basic computer terminology.


The vocabulary used in the design and construction trades vary widely by region. Our online Glossary provides definitions for the terms we use in our information resources. Visit chiefarchitect.com.

More information is available on Chief Architect's website, chiefarchitect.com.

TOOL TIPS


When you move the pointer over a toolbar button or menu item, a **Tool Tip** displays, offering a brief description of the tool. More information displays in the Status Bar at the bottom of the window. The Status Bar also reports information about the currently active tool or the currently selected object. See *The Status Bar on page 13*.

CONTEXTUAL HELP

 Chief Architect's **Help** is a searchable menu that provides information about all of the tools in the program. Select **Help > Launch Help** or press the **FI** key to open the program's Help and explore the table of Contents, browse the Index, or Search for keywords.

The Help can be used to provide instant information about toolbar buttons, menu items, and objects in your plan.

- Position the mouse pointer over a toolbar button or menu item, then press the **FI** key to open the Help to a page with more information about the tool.
- When an object is selected, press the **FI** key to open the Help to a page with information about that object. If you position the mouse pointer over one of the selected object's edit handles and press the **FI** key, a page with information about that handle will display instead.
- Press the **Help** button in any dialog box to open online Help to a page describing the options in that dialog.

When the Help is open, it will update automatically to show information about the currently selected object, active tool or dialog, or highlighted item. If you would like to turn off this dynamic behavior, click the **Prevent Help from Updating Dynamically**  button at the top of the Help window.

Additional buttons at the top of the Help window allow you to zoom as well as search the current page.

WARNING AND INFORMATION MESSAGES

As you work, the program may occasionally present Warning or Information messages regarding the operations you are performing. These messages are intended to help you use the program as designed and avoid potential problems. See *Message Boxes on page 14*.

TECHNICAL SUPPORT

If you encounter a problem while using Chief Architect Viewer X18, select **Help > Technical Support** to launch your default web browser to our Technical Support home page at www.chiefarchitect.com.

Chief Architect strives to make our documentation as helpful as possible. Please send any suggestions to: documentation@chiefarchitect.com.

About Chief Architect

Select **Help > About Chief Architect** in Windows[®] or **Chief Architect > About Chief Architect** in macOS[™] to view the program's version number and its release date.

Contact information for Chief Architect, Inc. is available on the MORE INFORMATION panel.

File Management

Chapter 2

Chief Architect Viewer reads and edits two main document types: **.plan** files and **.layout** files. The complete 3D model of a structure, surrounding terrain and any CAD data associated with it are stored in the plan file. Data used to create working drawings and the links to various views or details are stored in the layout file. These files also reference external assets like digital images used as material textures. To maintain links between files, effective file management is important.

All commands related to opening, saving and closing plans are located in the File menu. You can also open plans from the Dashboard window. See *Dashboard on page 5*.

Compatibility with Other Programs

The **.plan** and **.layout** files produced in the following programs can all be read by Chief Architect Viewer X18.

- Chief Architect® 10.0 through X17
- All Better Homes and Gardens Home Designer® products, Interior Designer, and Landscaping and Deck Designer, Versions 7 and 8.
- All Chief Architect Home Designer® products, Interior Designer, and Landscaping and Deck Designer, Versions 9 through 2026.

Files that have been opened and saved in the Chief Architect Viewer X18 can be read again in Version X18 Chief Architect programs and Version 2026 Home Designer programs, allowing you to share your thoughts and ideas with your design professional.

Files that have been opened and saved in Chief Architect Viewer X18 cannot be read by any of the program versions listed above.

Plans and layout files produced in the Windows® version of Chief Architect Viewer X18 can be read in the Mac® version, and vice versa.

Opening Plans and Layouts

Chief Architect drawings reference a variety of different files that convey information to help you visualize a design. There are two ways that your design professional may choose to share their work with you:

- By providing a **.caproj** Project file. See *Importing and Exporting Projects on page 21*.
- By providing a **.zip** zipped folder.

A good location to save these files is your Documents directory, which is specifically intended for your own files.



Before opening files in a **.zip** folder, they need to be extracted. In Windows, right-click on it in File Explorer and select Extract All from the contextual menu; in macOS, double-click on it in Finder. For more information, refer to your operating system's documentation.

A good location for these files is your Documents directory, which is specifically intended for your own files.




Before opening a file located on a removable storage device, server, or other computer on a network, copy it to your local computer's hard drive first.

OPEN FILE DIALOG

  To open a plan or layout file when traditional file management is in use, select **File> Open Plan** or **File> Open Layout**.

The Open File dialog uses your operating system's file open dialog format. When traditional file management is in use, this dialog is used for opening and importing all files. When Chief Architect Project Management is active, it is used for migrating unmanaged files into the Resource Store as well as importing files. This dialog's name may vary, depending on your operating system and the type of file being opened or imported.

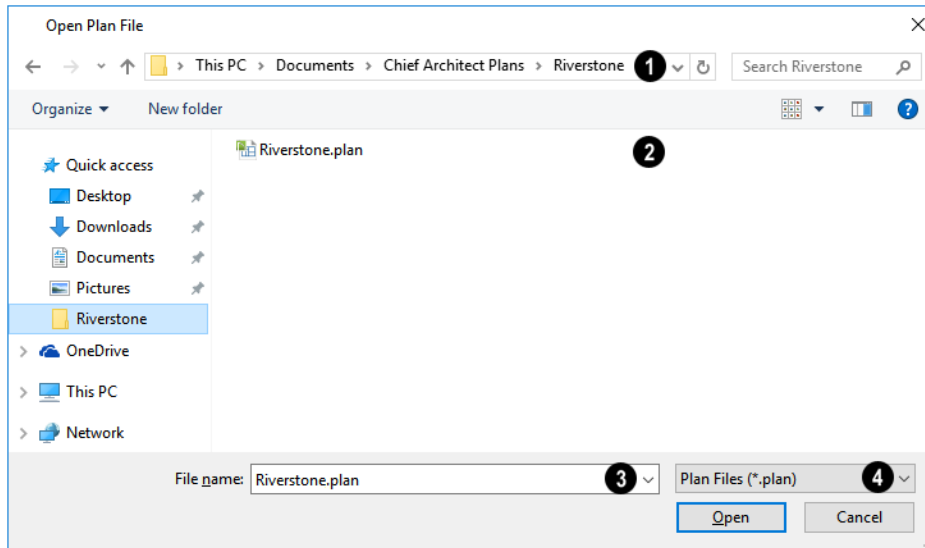

1 File Path

Browse to the location on your computer where the file you wish to open is saved.

2 Folder Contents

Any existing folders and/or files in the current location display here.

3 File Name

When selecting a file, its name will automatically display in the **File Name** field. You can also type the file's name to locate a specific file.


4 File Type

When opening a file, the program will usually choose the appropriate file type from the **File type** drop-down list.

Plan files open to the floor that was active when the file was last saved and closed; layout files open to the page that was active.

Exporting Pictures

There are two ways to save a picture of a view in Chief Architect Viewer:


 Using the **Export Picture** tool is similar to creating a screen capture of everything in the current view window. Pictures can be saved in various file formats and used in other applications. **Export Picture** is particularly suited for rendered views. When exporting a line-based view in the PC version of the program, you may prefer to save it as a metafile.

See *To export a metafile on page 20*.



Use the **Print Image** tool to either print or save the current view as a PDF file. See *Print Image Dialog on page 87*.

To export a picture

1. Open the view that you would like to export as a picture file.
2. Zoom, pan or otherwise adjust the view so that what you see on screen suits your needs. See *Displaying 3D Views on page 58*.
3. Select **File> Export> Export Picture (BMP, JPG, PNG)**  to open the Export Picture File dialog and give the picture file a name, file type, and save location. See *Exporting Files*.

Exporting Metafiles



A metafile (**.emf**, **.wmf**) is a special picture file format made up of vectors (lines) that allow the image to be rescaled without loss of quality. High resolution pictures of line-based views can be exported as a metafile.


Note: Metafiles are not supported in Mac operating systems and cannot be exported in Mac versions of the software.

EMF An enhanced metafile (**.emf**) can be exported from any line-based view: that is, from plan view and 3D Vector Views using the **Export Metafile (EMF)** tool.

Only objects that display on screen are included in an exported metafile.

To export a metafile

1. Accurately position the view on screen.
2. Select **File> Export> Export Metafile (EMF)** .
3. Drag a marquee  from corner to corner, defining the area to be included in the metafile.
4. Release the mouse button to open the Export Metafile dialog, which is a typical Save File dialog. See *Exporting Files*.
5. When you click the Save button, the Metafile Size dialog opens:

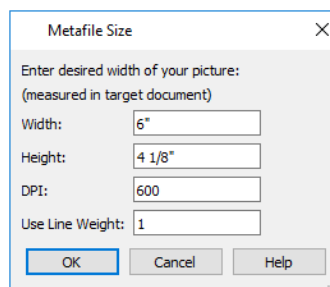


- Specify the desired **Width** or **Height** of the metafile. When one value is edited, the other changes to maintain its aspect ratio.
 - Specify, too, the desired **Dots Per Inch (DPI)** for the metafile. A larger value results in a higher quality metafile, but also a larger file size.
6. When a metafile is exported from a 3D Vector View, you can also specify the printed thickness of lines in the view. To increase the printing line weight, type a larger number in the **Use Line Weight** field. See *Vector View on page 80*.

Importing and Exporting Projects


IMPORTING A PROJECT

Chief Architect Projects reference a variety of different files that convey information to help you visualize a design. There are two ways that your design professional may choose to share their work with you:

- By providing a **.zip** zipped folder. See *Opening Plans and Layouts on page 18*.
- By providing a **.caproj** Project file.

 A Project can be imported by selecting **File> Import> Import Project**. The Select Project dialog opens, letting you browse to and select the **.caproj** file that you would like to add to your Resource Store. See *Opening Plans and Layouts on page 18*.

You first will be prompted to choose a location on your file system for the Project's documents and asset files before the import process begins.

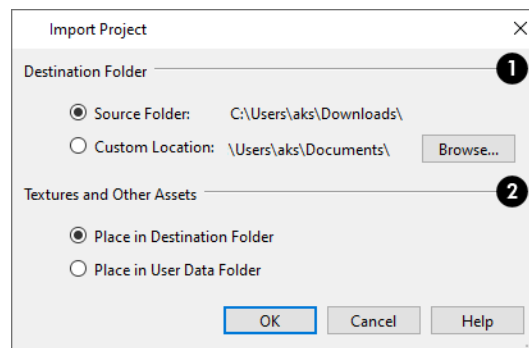

1 Destination Folder

The contents of an imported Project are placed in a new folder with the same name as the **.caproj** file. Specify the location of that folder.

- Select **Source Folder** to create the destination folder in the same location in your file system as the **.caproj** file.
- Select **Custom Location** to choose a different destination folder in the Select Project dialog, which is a typical Open File dialog. See *Opening Plans and Layouts on page 18*.

2 Textures and Other Assets


Textures and assets are images and other files that add detail to a Plan or Layout. Select the location where the imported Project's asset files are placed.

- Select **Place in Destination Folder** to save the asset files in the same destination folder as the plans and layouts, specified above.
- Select **Place in User Data Folder** to save the asset files in the Chief Architect Viewer X18 Data folder. See *Chief Architect Viewer Data on page 24*.

When you click OK, the import process begins and a progress dialog may display depending on the Project file's size.

When the import process is complete, a message box will let you know, and will provide you with the option of opening one or more Plans or Layouts in the imported Project. If you choose that option, the Open Plan or Layout File(s) dialog will open next. This is a typical Open File dialog. See *Opening Plans and Layouts on page 18*.

EXPORT PLAN/LAYOUT AS PROJECT

 When you are done reviewing and annotating your design professional's Plan or Layout files, you can export it as a Project by selecting **File> Export> Export Plan as Project** or **File> Export> Export Layout as Project**, respectively, while that file is open and active. In both cases, all Plan files are included in the **.caproj** file that is created; however, a single Layout file is included only when **Export Plan as Project** is used.


REFERENCED FILES

MISSING FILES/RESOURCES DIALOGS

Chief Architect Plans and Layouts can reference a variety of external file types for added detail, including:

- Material Textures
- Images
- Plant Images
- 3D Backdrops
- Picture Files
- PDF Files

Whenever any view in a plan or any page in a layout is opened, the program checks for referenced files used in that view and will notify you if any of those files cannot be found by opening the Missing Files dialog.

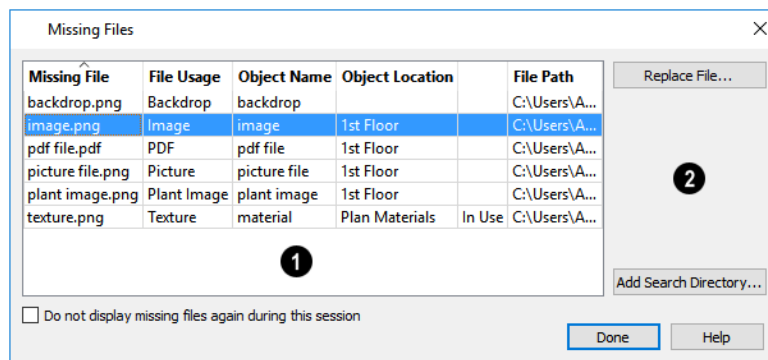

1 File Information

The table lists any Missing Files as well as useful information about each:

- **Missing Resource** reports the name and file extension of the missing file.
- **File Usage** indicates how the missing file is used in the program.
- **Used By** reports the name of the document that references the file. This column is only present when exporting a Project and is not shown here. See *Export Plan/Layout as Project on page 22*.
- **Object Name** states the name of the object in Chief Architect that references the file.
- **Object Location** indicates where in the Plan or Layout the object can be found.
- The next column indicates whether a missing backdrop, texture, or material map is **In Use** in the plan. See *Material Maps*.
- **File Path** states the last known location of the missing file on your computer system when traditional file management is in use. When Chief Architect Project Management is in use, this column reports "Managed".

Click on a line item in the table to select it and resolve it using the options on the right.


2 Options

The buttons on the right offer options for resolving a selected missing file.

- Click the **Replace File** button to open the Browse for Missing File dialog and select a file saved on your system to replace the missing one. See *Opening Plans and Layouts on page 18*.
- Click the **Add Search Directory** button to direct the program to a particular folder to search for missing files in.

You can prevent this dialog from opening automatically by checking **Do not display missing files again during this session** at the bottom of the dialog.

REFERENCED PLANS/LAYOUTS DIALOG

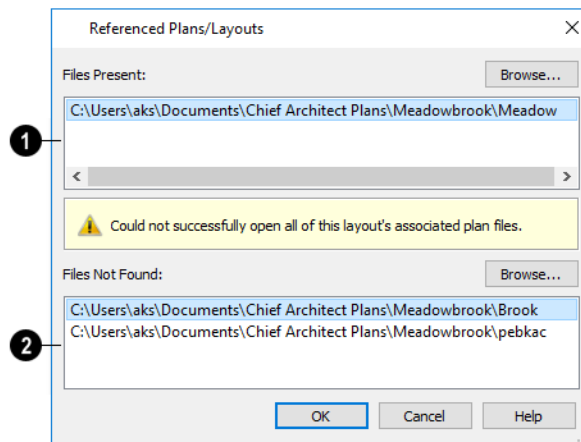

1 Files Present

The names of all plan files with intact links to the current layout are listed here.

If you want, you can select a file and click the **Browse** button just above the **Files Present** field and replace the selected plan with a different plan saved on your system.

2 Files Not Found

The names of all plan files with disrupted links to the current layout are listed here. Any files listed here have been moved, renamed, or deleted and cannot be found by the program. Intervention is required to find these files and reestablish their links to the current file.

When Chief Architect Project Management is in use, select a missing file and click the **Replace Reference** button just above the **Files Not Found** field to open the Replace Reference Plan dialog. See *Select Project Dialogs*.

When traditional file management is in use, select a missing file and click the **Browse** button just above the **Files Not Found** field to open the Browse For Missing File dialog, which is a typical Open dialog. See *Opening Plans and Layouts on page 18*.

- Locate the missing file in your system’s directory structure. When the missing file is selected, click **Open** to link it to the layout.
- You can also redirect an intact link to from a file in the File Present list to a different file in the same manner.

If all missing files are successfully relinked, the layout opens when you click **OK** in the Referenced Plans/Layouts dialog.

Be sure to choose **File> Save**  in the current file when the missing files have been located to save their links.

Chief Architect Viewer Data

When Chief Architect X18 is installed, the program automatically creates a folder in the user Documents directory called **Chief Architect X18 Data**.

The Chief Architect X18 Viewer Data folder contains important user-specific information saved in the following folders and should not be moved, renamed or deleted:

- **Archives** - A folder of automatically archived plan and layout files.
- **Hotkeys** - A folder of hotkey assignments.
- **Scripts** - A folder for custom Ruby scripts associated with some Chief Architect plans.
- **Toolbars** - A folder of customized toolbar files.

Because the Chief Architect X18 Data folder contains custom user data, it is not deleted when the program is uninstalled. See [Uninstalling Viewer](#).

Auto Archive

When Chief Architect X18 is installed, the program automatically creates a folder in the user Documents directory called **Chief Architect X18 Data**. This folder contains important information including Auto Save and Archive files, and should not be moved, renamed or deleted.

The first time a plan or layout is saved, an Archive folder is automatically created in the Chief Architect Viewer X18 Data folder. The Archive folder contains Auto Save and Archive files.



Auto Save and Archive files should not be viewed as a substitute for regularly saving your work by selecting **File> Save** or pressing **Ctrl/⌘ + S**, nor should they be considered an alternative to your own file backup routine.

ARCHIVE FILES

Every time a drawing is saved, Archive files that keep a historical archive of your plan are automatically created and then updated.



JonesResidence.plan




JonesResidence_2026_1_15.plan



JonesResidence_2026_1_15_13.plan




If you do not save your work regularly, your archive files will not be updated.

Archive files are meant to be for emergency use only. If you must access an archive file, open it as you would any other file. As soon as the file is open, use **Save As**  to save this file to another location.


MANAGE ARCHIVES

Chief Architect offers two convenient ways to access Archive folders.


- Select **File> Manage Auto Archives**  to open the current plan's Archive folder.
- Click **Yes** in the Archived Files dialog when the program warns you that the number of archive files exceeds the **Auto Archive Files** value.

You can also move, copy, or delete archived files using your operating system. See your operating system's Help for more information.


AUTO SAVE FILES

As you work, Chief Architect automatically creates Auto Save files which are saved in the Archive folder located in the Chief Architect Viewer X18 Data folder. Auto Save files are updated at 5 minute intervals when changes are made to a file that have not been saved by selecting **File> Save** .

When you close a file normally, its Auto Save file is retained until the next time the file is opened - at which time the Auto Save file is overwritten. The name of an Auto Save file after a normal shutdown is appended **_auto_save.plan** or **_auto_save.layout**, like this:



 JonesResidence_auto_save.plan

Auto Save files created as a result of an improper program shutdown are appended **_auto_save_bak.plan** or **_auto_save_bak.layout**, like this:

 JonesResidence_auto_save_bak.plan


If your computer shuts down improperly, you may be able to recover some of your work by opening the **_auto_save_bak** file. The next time you open a file affected by an improper shutdown, the program will notify you if an Auto Save file newer than the original file is found and it will give you the option to open that file. **_auto_save_bak** files are overwritten, so you will only have this opportunity once after an improper shutdown. As such, you should always open the **_auto_save_bak** file and use **Save As** or **Make A Copy** to retain a copy of this file. To identify it as a recovered auto save file, you can append it with **_recovered**. See [Saving Plan and Layout Files](#).

Even with Auto Save, you should save your work manually on a regular basis using any of the following methods:

- Click the **Save**  button.
- Select **File> Save** .
- Press **Ctrl/⌘ + S**.


Because the Chief Architect Viewer X18 Data folder contains custom user data, it is not deleted when the program is uninstalled.

Undo and Redo

 The **Undo** and **Redo** commands allow you to both undo the last action performed, as well as redo actions that were recently Undone.

The 50 most recent actions can be Undone or Redone. Actions that can be Undone and Redone include creating, editing, and deleting objects.

To Undo an action, select **Edit> Undo**, click the **Undo**  button, or press **Ctrl/⌘ + Z**.

The Redo command is only available after Undo has been used. To Redo an Undone action, select **Edit> Redo**, click the **Redo**  button or press **Ctrl/⌘ + Y**.

It is important to note that **Undo** and **Redo** do not affect all actions in the program, including:

- Save and Save As. See *Saving Plan and Layout Files*.
- Changes made in a dialog while the dialog box is open. See *Dialogs on page 11*.
- Changes made to the display by panning the display or zooming in or out. See *Zoom Tools on page 30*.
- Changes made to the position of a camera, or its Rendering Technique. See *Editing 3D Views on page 66*.

Exiting Chief Architect

Select **File> Exit** in Windows[®] or **Chief Architect> Quit** in macOS[™] to exit the program. It is best to save your work before exiting/quitting; however, if you have not saved any open files, you will be reminded to do so. See *Closing Views and Files on page 32*.

When you exit from the program using **File> Exit** or **Chief Architect> Quit**, all Autosave files and Undo files are automatically deleted. See *Auto Save Files on page 25* and *Undo and Redo on page 25*.

In macOS[™], if you click the program window's red **Close** button, the program window will close and you will be prompted to save your work; however, the program itself will continue to run. If you do not plan to use the program in the near future, it is good practice to **Quit** instead of letting the program run in the background.

Window and View Tools

Chapter 3

The View and Window Tools let you control how views of your drawing are shown on screen, as well as toggle useful drawing aides on and off.

By default, Chief Architect uses a tabbed document interface. The name of the file and the type of view displays at the top of each view window in its title bar. If the view is saved, its name also displays.

View Windows

In Chief Architect, there are several different types of views:

- *Plan Views, see page 27*
- *3D Views, see page 54*
- *Cross Section/Elevation Views, see page 55*
- *Viewing a Layout File, see page 16*

Each view can show the model from a different perspective and displays in a view window. Multiple views can be open and display on screen; however, only one view window can be active at any given time. See *3D Views on page 54* and *Working in Multiple Views on page 28*.

SAVING VIEWS

You can specify that any camera, or cross section/elevation view be saved. See *Saving 3D Views on page 72*.



To save an unsaved camera, view, select **3D> Save Active Camera**.

Changes to a saved view's attributes will not be retained unless you Save the view before closing it.

VIEW SPECIFICATION DIALOGS

These view types have a specification dialog that allows you to edit various aspects of its appearance and content:

- *Camera Specification Dialogs, see page 73*
- *Cross Section/Elevation Specification Dialogs, see page 76*


CLOSING VIEW WINDOWS

There are a number of ways to close view windows. See *Closing Views and Files on page 32*.

Plan Views

When a plan file is opened, a plan view is active. Most Chief Architect files have a selection of different Saved Plan Views that show different information about the design. You can select the view you want to see from the **Saved Plan View**

Control  **Plan View** ▼ drop-down in the toolbars.

You can create additional plan views for use during the current program session: select **Tools> New Plan View** . Each plan view that you create can show a different floor and have different view extents and Color setting.



CREATING NEW PLAN VIEWS



To create a new plan view, select **Tools> New Plan View**. An identical copy of the current plan view is created and becomes the active view.

OPENING A SAVED PLAN VIEW

There are three ways to open a Saved Plan View:

- Select a view from the **Saved Plan View Control**  **Plan View** ▼ drop-down in the toolbars.
- Right-click on a view in the Plan Views folder in the Project Browser and select **Open View** from the contextual menu. See [Project Browser](#).
- If a Saved Plan View has been sent to layout, select its layout box and click the **Open View**  edit button. See [Editing Layout Views](#).

Working in Multiple Views

There is no limit to the number of Plans that can be open, nor is there a limit to the number of view windows that can be open. The name of the document and the type of view is stated at the top of each view window in its title bar as well as in its tab. If the view is saved, its name displays instead of the view type.

By default, Chief Architect uses a tabbed document interface, which means that when more than one view window is open in the program window, each open window will have a tab that displays in a row above the currently active view.

- Each tab states the name of the file, the view type, and the view's name.
- Each tab features an icon indicating its type of view.
- If you hover over a tab, the full path name of the view's plan or layout file is reported in a tool tip.
- Click on a tab to make it the active view.
- If there is not enough room in the program window to display all tabs, left and right arrow buttons allow you to scroll through the tabs.
- Tabs can be reordered by clicking and dragging.


There is no limit to the number of 3D view windows that you can have open at a given time; bear in mind, though, that each window demands use of your computer's resources and that you may see poor performance if too many views are open. See [3D Views on page 54](#).

There are several ways to close a view window. See [Closing Views and Files on page 32](#).

TILING VIEWS



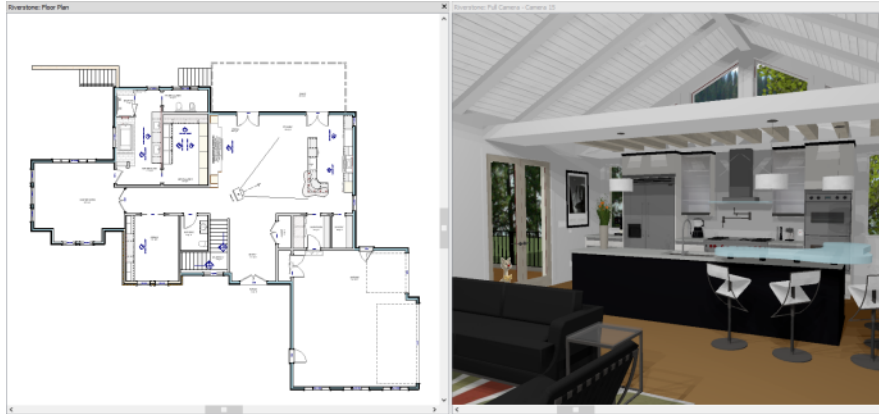

As an alternative to tabbed views, windows can instead be tiled.



A plan view and camera view tiled vertically

There are several ways to create tiled views:

- Click and drag a view window's title bar or tab into the part of the drawing area that you would like it to be. When a highlighted space is created, release the mouse button.
- Select **Window > Tile Horizontally**  to display views in a horizontal orientation, one above the other.
- Select **Window > Tile Vertically**  or press **Shift + F6** to display views in a vertical, side by side, orientation.

Views are tiled left to right or top to bottom in the order in which they were last active: the most recent view is on the left or at the top, while least recent is on the right or on the bottom.



- To activate a view, click on its title bar or anywhere in the view window. Note that any changes you make in the active window are reflected in other views as well.
- To end window tiling, select **Window > Tab Windows**. You can also end tiling by double-clicking on the title bar of the program window.

MULTIPLE PROGRAM WINDOWS

To create a second program window, click and drag the title bar or tab of a view window completely out of the current program window: for example, onto a second monitor. A second program window will be created with its own menu and toolbars.

SWAPPING VIEWS

There are a number of ways to switch between open view windows:

- Click on a view window's tab.
- Select **Window > Select Next Tab**  or **Window > Select Previous Tab**  to cycle through all open views in the order you prefer.
- In Windows[®], press the **Ctrl + Tab** (Next Window) or **Ctrl + Shift + Tab** (Previous Window) keys to cycle through all open views.
- In macOS[™], press the **⌘ + }** (Next Window) or **⌘ + Shift + {** (Previous Window) keys to cycle through all open views.
- A list of all the views currently open is located at the bottom of the Window menu. Each view is identified by its name and what type of view it is. A check mark is beside the view that is currently active. Select one to go directly to that view.

If more than eight view windows are open, **More Windows** will be the last item in the Window menu. Select this option to open the Select Window dialog:

Select the name of a view in the list and click **OK** to make it the active view.

View Tools

The **View Tools** allow you to open and close the program's side windows, as well as toggle a variety of references and drawing aides. Select the **View** menu to access these tools.



Refresh Display redraws the current window to clean up extra lines, show missing items, and correct random on-screen effects caused by changes to the model.



Tool Palette opens and closes the Tool Palette, which will display related tools.



Scrollbars displays and suppresses scrollbars on view windows.



Color toggles the display of color in the current view.



Crosshairs toggles the use of the blue crosshairs centered on the mouse pointer in most views.



Coordinate System Indicator - Floating toggles the Floating Axes Indicator in views of the current type in all files. See [View Windows on page 27](#).



Coordinate System Indicator - Fixed toggles the Fixed Axes Indicator in views of the current type in all files and can be added to the toolbars.



Coordinate System Indicator - Origin toggles the Origin Indicator in views of the current type in all files and can be added to the toolbars.

Zoom Tools



Zoom is used to magnify any given area on the plan or 3D view. Select **Window > Zoom**, then click and drag a marquee around an area on screen. When you release the mouse, the selected area expands to fill the screen.

Note that in 3D views, using **Zoom** does not reposition the camera. This can lead to inconsistencies between a camera's position and what is actually shown in the view if other methods of zooming are used later. See [Navigating in Camera Views on page 60](#).

When the zoom is complete, whatever tool was active prior to selecting the **Zoom** tool automatically becomes active again. If another zoom is needed, click the **Zoom** tool again.

These additional commands are also found in the **Window** menu:



Zoom In - Click to zoom in towards the screen center by a factor of two.



Zoom Out - Click to zoom out from the screen center by a factor of two.



Undo Zoom - Reverse the last zoom or fill window operation. This option is also found in the contextual menu, as is the **Zoom** tool. See [Menus, Toolbars, and Hotkeys on page 10](#).



Fill Window Building Only - Fits all walls and railings on the current floor on screen.



Fill Window - Fits all visible items on screen. See *Fill Window on page 31*.

Note: Changes to a view's zoom status are not affected by Undo and Redo.

ZOOMING WITH THE MOUSE WHEEL



Use the mouse wheel to zoom in and out in all view windows. Scrolling the mouse wheel one click up or down zooms in or out, centering on the location of your pointer and changing the zoom by about 10%.

By default, zooming in 3D views changes the camera's position. See *Mouse Scroll Wheel and Trackpad on page 60*.

Note: Depending on the configuration of your mouse, it may be necessary to hold down the **Ctrl/⌘** key while turning the mouse wheel.

Fill Window



In plan view or a cross section/elevation view, select **Window > Fill Window** or press the **F6** key to view nearly everything on screen that is visible, including the Reference Display. CAD Points are the only objects that are not included when Fill Window is used.

If you are zoomed in so that only a portion of the drawing displays on screen, selecting **Fill Window** zooms out so that the entire view fits on the screen. If you are zoomed out so that the entire drawing is smaller than the screen, selecting **Fill Window** zooms in until the drawing fills the screen.

When the drawing sheet is shown, **Fill Window** zooms to the sheet borders.

FILL WINDOW BUILDING ONLY



Window > Fill Window Building Only is similar to **Fill Window**, but zooms in or out to so that all walls, railings, and roof planes in the view fill the current window. These objects are included in the extents of the view even if their layers are turned off. Other objects are ignored.

IN 3D VIEWS

In 3D views, the **Fill Window** tools adjust the camera's Field of View is adjusted so that all surfaces in the 3D view are included.


Panning the Display

There are a number of ways to pan the display without changing the zoom factor.

USING THE ARROW KEYS

In plan view, the Arrow keys work exactly like clicking the Arrow buttons on the scrollbar.

USING THE MOUSE

If you have a wheel mouse, you can pan the display by pressing the middle mouse button, or wheel, and moving the mouse in the direction you would like to pan. When the middle mouse button is held down, the pointer changes to a hand  icon.

In the Mac version of Chief Architect, you can pan using the left mouse button and Option key.

Mouse drivers sometimes have other functions assigned to the wheel and buttons. These override the Chief Architect setting.


USING A MAC TRACKPAD

In the Mac version of Chief Architect, you can two finger drag to pan the display. See [Trackpads on page 9](#).

USING THE PAN WINDOW TOOL




The **Pan Window** tool works much like the mouse wheel method.

- Select **Window > Pan Window**. The pointer changes to a hand  icon. Click and drag to pan the window. The program reverts to the previously active tool when you release the mouse button.

USING THE SCROLLBARS

One method is to use the scrollbars on the right and bottom edges of the window.

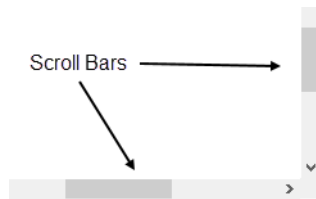

- Click the end arrow keys on the scrollbars to shift the display in 12" increments.

AUTOMATIC VIEW SCROLLING

When clicking and dragging to either draw or edit an object in such a way that the pointer goes past the current view window's extents, the view will automatically adjust so the pointer remains in-view. **Automatic View Scrolling** speed can be adjusted, and you can disable this behavior if you wish in the Preferences dialog. See [Edit Panel](#).


Closing Views and Files

If a view is still needed, you can swap to a different view without closing it. See [Working in Multiple Views on page 28](#).

There are a number of ways to close a single view window:

- Select **File > Close View** to close the active window.
- Press **Ctrl/⌘ + W** or **Ctrl/⌘ + F4** to close the active window.
- Click the **Close** button in the active view's title bar or in any view's tab.
- A tabbed view can be closed by clicking on its tab using the middle mouse button. See [Three Button Mice on page 8](#).
- Right-click on a view in the Project Browser and select **Close View** from the contextual menu. Not available for Floor Levels.

There are also several ways to close multiple windows at once:

- Select **File > Close All 3D Views**  to close all currently open camera view windows.
- Select **File > Close All Views** to close all currently open view windows aside from the Dashboard.

- Right-click on a Project in the Project Browser and select **Close All Plans/Layouts** from the contextual menu to close all of its Plans and Layouts. Documents in other Projects are not affected. Not available when none of its Plans or Layouts are open.
- Right-click on a Folder in the Project Browser's Project panel and select **Close All Plans/Layouts** from the contextual menu to close all of its Plans and Layouts. Documents in other Folders are not affected. Not available when none of its Plans or Layouts are open.

If a Plan has only one view window open and you try to close it, the program will prompt you to save the file before closing if there are any unsaved changes. See [Saving Plan and Layout Files](#).



Although the program warns you if you try to exit without saving, you should get in the habit of saving your Plans and Layouts before exiting.

Even if all view windows are closed, the program can still be open. It is a good idea to Exit or Quit the program, however, if you will not be using it for an extended period of time. See [Exiting Chief Architect on page 26](#).

Displaying Objects

Chapter 4

Layers allow to you control which objects display in floor plan and camera views.

Display Layers

Layers are used to organize and manage the display of all objects in all views except Materials Lists. A layer can be thought of as a transparent sheet with objects placed on it for viewing. Nearly all views use multiple layers, like a stack of transparencies put together to show a combination of different types of objects.

You can specify whether each layer displays in a particular view in the Layer Display Options dialog. You can also can find out which layer a Text object that you have drawn is on by selecting it and looking at the Status Bar. See [Layer Display Options Dialog on page 34](#) and [The Status Bar on page 13](#).

Multiple layers are organized into Layer Sets, which allow you to control which objects display in different views. See [Layer Sets on page 35](#).


Layer Display Options Dialog



The Layer Display Options dialog controls the display of layers in the active layer set. From any view except the Materials List, select **Tools> Display Options** to open this dialog.

The Layer Display Options dialog consists of a table that lists all layers and their attributes.

To edit the attributes of the Reference Floor Layer Set, click the **Define** button in the Change Floor/Reference dialog. See [The Reference Display on page 53](#).

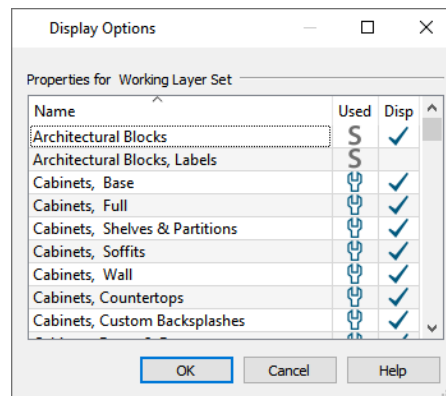

The layers in the Layer Display Options dialog can be sorted by either of its columns.

- An icon in the **Used** column indicates that the layer is in use. The information in this column can be sorted, but not edited here.
- Click in the **Disp** column to remove or add a checkmark. A checkmark indicates that the layer is set to display in the current view.

- Click **OK** to close the dialog and apply your changes.
- Click **Cancel** to close the dialog, ignoring any edits.

Note: Not all objects display in all views. For instance, invisible walls do not appear in camera views.

Layer Sets

Layer Sets are used to control the layer settings for different views in a plan or layout file.

A Layer Set consists of a complete list of the layers in the current plan or layout along with the display settings for each layer as set for a particular type of view. These display settings can be modified, and can be different for each type of view. See *Layer Display Options Dialog on page 34*.

Layer sets are file specific, which means that changes made in one plan or layout file have no effect on the settings in other files.

Chief Architect uses a different Layer Set for each type of view of your plan:

- Plan views. See *Plan Views on page 27*.
- Camera views and Overviews. See *3D View Tools on page 55*.
- Cross Section/Elevation views.
- Wall Elevation Views.
- Framing Overviews. See *Framing Overview on page 57*.
- Reference Floor. See *The Reference Display on page 53*.


While any view is active, select **Tools> Display Options**  to make changes to the Layer Set used for that view type.

Any changes made to settings in the Layer Display Options dialog for one particular view will affect all views using that same Layer Set. For example, if you make changes for a camera view, all camera views and overviews in the current plan will be affected. See *Layer Display Options Dialog on page 34*.


Display Toggles

There are a number of toggles and tools that can be used to affect the appearance of the on-screen display. Some toggles affect the current view, while some are global and affect all views.

Refresh Display

 **Refresh Display** redraws the current window to clean up extra lines, show missing items, and correct random on-screen effects caused by changes to a model. Select **View> Refresh Display** or press the **F5** key to refresh the on-screen display.

Color On/Off


 The display of color on-screen can be toggled on and off in the current view without affecting other views by selecting **View> Color**.

- If **Color** is toggled off in any 3D view other than a Vector View, the view will be displayed in grayscale.
- If **Color** is toggled off in any line based view, including plan view, Vector Views, and layout, the view will be displayed in black and white.


Print Preview

 **Print Preview** allows you to get a sense of what the current view will look like when it is printed. See *Print Preview on page 83*.

Crosshairs


 **Crosshairs** help you position the pointer relative to objects in a view while drawing and editing and are toggled globally for plan and cross section/elevation views, as well as camera views and overviews. See *Crosshairs on page 10*.

Coordinate System Indicators


 The **Coordinate System Indicators** help locate your model within Chief Architect's three dimensional coordinate system and are toggled globally for three different view categories. See *View Windows on page 27*.


OTHER TOGGLES

Delete Surface

 In any 3D view, select **3D> Delete Surface**, then click a surface in the view to temporarily remove the surface from the current view. See *Delete 3D Surface on page 59*.

Select Color Dialog

 Mouse over a Color bar in any dialog to display a tool tip reporting the selected color's RGB values.

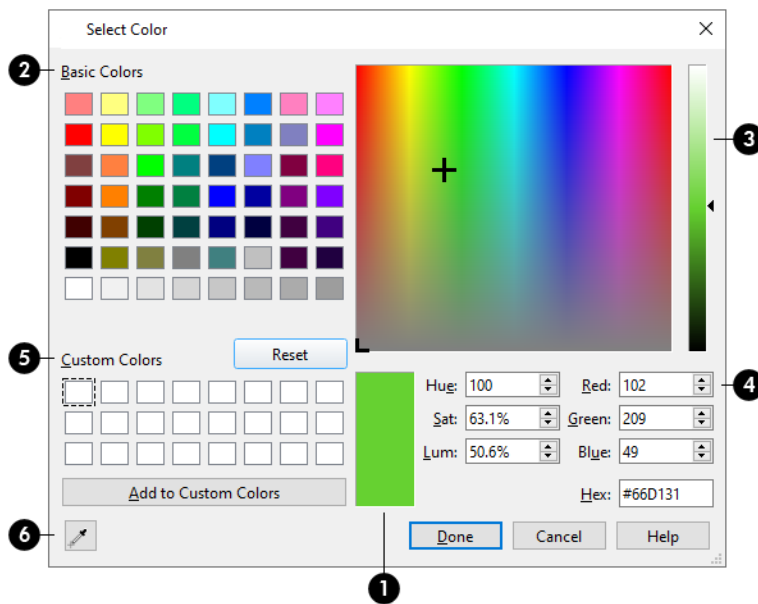

1 Current Color

The currently selected color displays in the rectangle at the lower center of the dialog. There are a number of ways to select

a color in this dialog.

2 Basic Colors

Click in any one of the color boxes to select it.

3 Color Spectrum

- Click anywhere in the color spectrum area to select a color. The location of the selected color is identified by crosshairs.
- Click anywhere in the vertical bar or drag the arrow to adjust the selected color's Luminosity and RGB values.

4 Color Definition

- Define a color by specifying its **Hue, Saturation, and Luminosity** (HSL) or its **Red, Green, and Blue** (RGB) values.

5 Custom Colors

Custom colors are retained during the current program session only.

- Click in one of the **Custom colors** boxes to either select it or to specify it as the box for a new custom color to be defined.
- Click the **Add to Custom Colors** button to add the selected color to the Custom Colors group.
- Click the **Reset** button to reset all Custom colors to white.

6 Color Chooser Eyedropper

Click this button, then click anywhere on your monitor to select the color displaying at that location.

Click OK to apply the currently selected color to the object's line or fill style, or to the material's pattern color.

Text


Chapter 5


Text is a simple and effective way to communicate your thoughts and suggestions regarding a drawing. Text can be added in floor plan and cross section/elevation views, and to layout pages.

Fonts and Alphabets

Chief Architect allows you to use any font found in your computer’s Fonts directory.

INTERNATIONAL ALPHABETS

The **Rich Text**  tool supports unicode alphabets and characters. In order to use a unicode alphabet or characters, the appropriate language support must be installed on your computer. See *The Text Tools on page 39*.

Special characters can be added to any **Rich Text**  object by:


- Copying and pasting the character from another application;
- Copying and pasting the character from the Windows Character Map;
- Using the Mac Character Viewer;
- Typing the keystroke associated with the character.

See *Copying and Pasting Text Objects on page 46*.

REPLACE FONTS

 Select **Edit> Replace Fonts** to replace one or more fonts in the current file with a different font using the Replace Fonts dialog.

The Replace Fonts dialog will also open if you open a plan or layout file that uses a font that is not installed on the current computer, giving you an opportunity to replace that font.

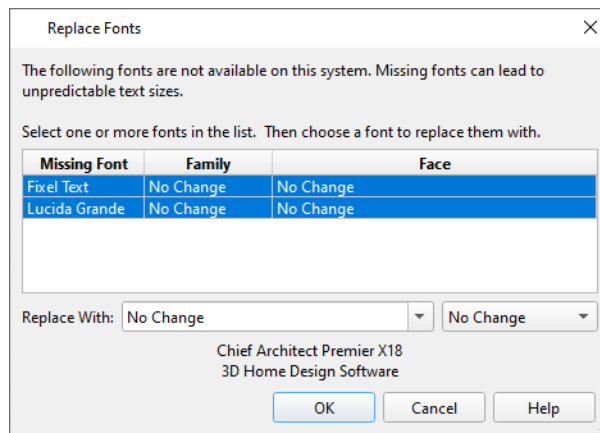

The table lists all missing fonts in the current file and how they will be replaced.

- Click on a **Missing Font**'s name in the list to select it. Use the **Shift** or **Ctrl/⌘** key to select multiple fonts.
- Select a replacement font Family and Face from the **Replace With** drop-down lists. The Family list is populated by all font families installed on the local system. The items in the Face list vary depending on the font styles included in the selected Family.
- “No Change” indicates that a replacement for a missing font has not been selected. If you do not select a replacement, the program will select a font Family and Face that appears to best match the size attributes of the missing font.
- A preview of the selected font displays below the **Replace With** list.

If this dialog opens in response to missing fonts and you do not plan to return the file to the computer where it was created, you may want to replace missing fonts with the fonts you normally use. On the other hand, if you do intend to return the file, you may prefer to not replace any missing fonts.

The Text Tools

T Select **CAD> Text** to access the **Text Tools**. These tools are available in plan view, in cross section/elevation views, and in layout files.



The **Rich Text** tool is used to create text objects. See [Creating Text on page 39](#).





The **Arrow Line** tool is used to make a connection between a feature of the design shown in the current view and a text object commenting on that feature. See [Arrow Lines on page 48](#).

Creating Text

Once created, text can be selected and edited in a variety of ways. See [Editing Text on page 44](#).


To create Text

1. Select **Tools> Text** .
2. Click in the drawing area, and the Rich Text Specification dialog will open. See [Rich Text Specification Dialog on page 40](#).
3. Type or paste the desired text into the Text Field.
4. Use the options in the dialog to change the font, style and size of any portion of the text. See [Editing Text on page 44](#).
5. When you are finished, click OK. The **Text**  tool remains active, so you can create additional text objects if you wish.

Note: If you do not type anything in the Text Field, a text object will not be created when you click outside it.

You can also create lines with arrows connecting the text that you create to items in the drawing. See [Arrow Lines on page 48](#).

HYPERLINKS

- +  Hyperlinks that link to web pages both in the views they are created in as well as when printed to PDF can be added to Rich Text objects in their specification dialogs. See [Text Panel on page 40](#).

Displaying Text Objects


As with other types of objects, the display of Text objects is controlled in the Layer Display Options dialog. See *Layer Display Options Dialog on page 34*.

Text objects can only be displayed in views where text can be created.

The display attributes of each individual text object can be controlled independent of the layer it is placed on. See *Rich Text Specification Dialog on page 40*.


The display attributes of individual text objects, such as color and size, can be set in their specification dialogs. See *Rich Text Specification Dialog on page 40* and *Line/Polyline Specification Dialog on page 49*.

Rich Text Specification Dialog

 The Rich Text Specification dialog opens if you select one or more Text objects, then click the **Open Object** edit button.

This dialog also opens when you select the **Rich Text**  tool and then click once in the drawing area.

When **Text** objects are group-selected, the text content, zoom factor, and Paragraph Options cannot be changed, but everything else can be.


Arrow Lines  have their own specification dialog. See *Line/Polyline Specification Dialog on page 49*.

TEXT PANEL

The settings on the TEXT panel allow you to type the selected Text object's content and control many aspects of its appearance, including its font, size, color and style.

You can specify the appearance of the text before typing, and can also select and change the attributes of all or portions of the text content after it is typed. To change text that already exists, simply highlight it using the mouse and/or the Shift + arrow keys and then make any needed changes to its attributes.

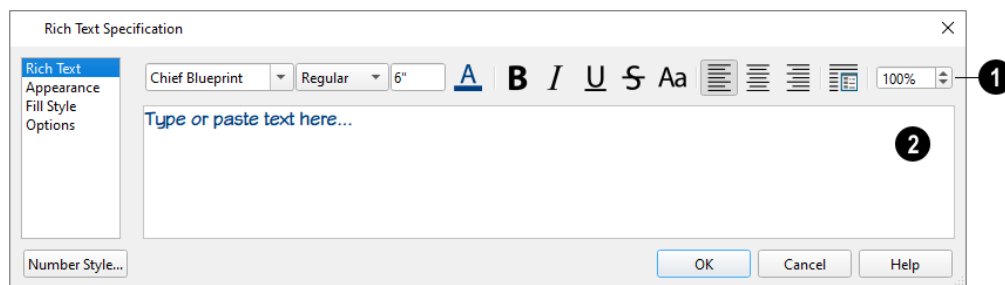

Note: If you do not type anything in the text field on this panel when creating a new object, no object will be created when you click OK. On the other hand, if you remove the text from an existing object and click OK, an empty text box will result.












1 Edit Bar

Use the options on the Edit Bar, which displays above the Text Entry field, to change the font, size, and style of the text.

Select the desired options before typing to affect the text as it is typed, or select some or all of the text and then specify which options to apply to it.

- Select a **Font Family** and **Style** from the drop-down lists. See *Fonts and Alphabets on page 38*.
 - The available Styles vary depending on which Font Family is selected.
- Specify the **Text Size** in drawing units.
- Click the **Color**  button to specify the color of the selected or subsequently typed text. See *Select Color Dialog on page 36*.
- Click the **Insert Hyperlink**  button to insert text that links to a web address or edit an existing selected hyperlink. See *Hyperlinks on page 39* and *Insert Hyperlink Dialog on page 41*, below.

Note: Hyperlink text is automatically underlined and assigned a non-default blue color. Once created, though, it is editable. To remove a hyperlink, select the linked text, right-click, and select Remove Hyperlink from the contextual menu.

- Click the **Bold**  button to specify the selected text as bold. The **Ctrl/⌘ + B** hotkey can also be used.
- Click the **Italic**  button to specify the selected text as italic. The **Ctrl/⌘ + I** hotkey can also be used.
- Click the **Underline**  button to specify the selected text as underlined. The **Ctrl/⌘ + U** hotkey can also be used.
- Click the **Strikethrough**  button to specify the selected text as stricken-through.
- Click the **Uppercase**  button to display the selected text in all capital letters.
- Click the **Align Left** , **Align Center** , or **Align Right**  button to specify how the selected text is aligned.
- Click the **Paragraph Options**  button to specify the selected paragraph's alignment, spacing and bullets or numbering in the Paragraph Options dialog.
- Specify the **Zoom** factor of the selected text by typing a percentage value in the text field or clicking the up/down arrows. This setting only affects the text as it appears in this dialog.


Note: Some fonts cannot be drawn at certain zoom factors. When this is the case, the appearance of the text will not change.

2 Text Entry Field

Type or paste text in the Text Entry field. See *Editing Text on page 44*.



- Right-click in the Text Entry field to access a contextual menu from which you can select Undo, Redo, Cut, Copy, Paste and Select All. See *Contextual Menus on page 10*.
- To edit text in the entry field, click and drag to highlight any portion of it and then use the tools on the Edit Bar as needed.

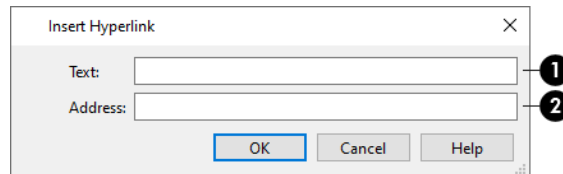INSERT HYPERLINK DIALOG



1 Text

Specify the text of the hyperlink that the reader will see.


- If any text in the Rich Text Specification dialog is selected or if the cursor is located within an existing hyperlink when you click the **Insert Hyperlink**  button, it will populate the **Text** field. If you change this initial text, the selected text in the Rich Text Specification dialog will update when you click OK and return to that dialog.
- If no text is selected but the cursor is located within an existing hyperlink when you click the **Insert Hyperlink**  button, that hyperlink will essentially be selected: its text will populate the Text field and its address will populate the Address field.

2 Address

Specify the address, or URL, of the page that the link will access.

- If the **Address** field is empty when you click OK, the hyperlink will be removed.

PARAGRAPH OPTIONS DIALOG

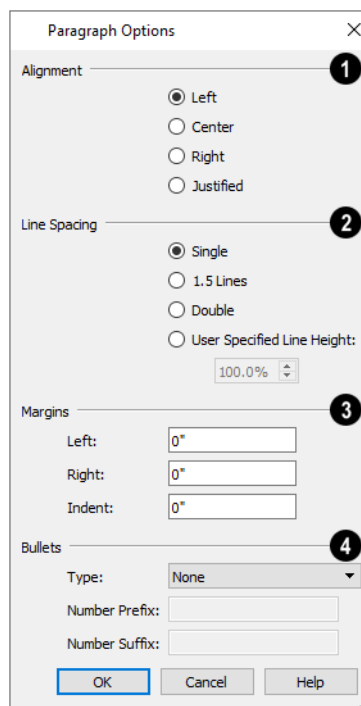

1 Alignment

Specify the **Alignment** of the selected paragraph(s).

2 Line Spacing

Specify the **Line Spacing** of the selected paragraph(s).

- Click the radio button beside **Single**, **1.5 Lines**, **Double** or **User Specified**.
- If you select **User Specified Line Height**, type the desired height in the text field. For best results, this value should be at least as much as the largest text size used in the selection.

3 Margins

Specify the appearance of the selection's side **Margins**, as measured in from edges of the text box. Only positive Margin values can be used.

- Specify the **Indent**, which is measured from the left side margin. A negative value can be used if a left Margin has been specified.

4 Bullets

Specify the appearance of **Bullets** and numbering in the selection.

- Select the desired bullet, numbered, or lettered **Type** from the drop-down list.
- Specify the **Number Prefix**, which are any characters that you would like to display before the number or letter. Does not affect paragraphs using circle or square bullets.
- Specify the **Number Suffix**, which are any characters that you would like to display after the number or letter and before its actual text. Does not affect paragraphs using circle or square bullets.

Selecting Text Objects

"Select refers to selecting a Text object or Line/Polyline with Arrow for editing. Only objects added using Chief Architect Viewer can be selected and edited. An object must be selected before it can be edited. See [Editing Text on page 44](#).

There are a number of ways that objects can be selected:

Information about the selected object or objects will display in the Status Bar. See [The Status Bar on page 13](#).


A selected object remains selected until another object is selected, a different tool is activated, the **Esc** key is pressed, or any two mouse buttons are pressed at the same time.

SELECT OBJECTS



 Text objects and Arrow Lines created using Chief Architect Viewer's drawing tools can be selected using the **Select Objects** tool. Select **Edit> Select Objects**, click the toolbar button or press the **Spacebar** to activate this tool, then click on an object to select it.

You can also select these objects or open context sensitive menus using the right mouse button when any tool is active.

SELECT NEXT OBJECT

 If there is more than one Text object or Arrow Line in a particular space, it may be difficult to select the desired **next** object. When a nearby object is selected, click the **Select Next Object** edit button or press the **Tab** key until the desired object becomes selected. This function cannot be applied to groups of selected objects.

SELECTING SIMILAR OBJECTS

If a tool other than **Select Objects**  is active, you can only select objects of that type using the left mouse button. For example, if the **Arrow Line**  tool is active, you can only select Arrow Lines and Polylines using the left mouse button.


Objects can be selected using the right mouse button, regardless of which tool is active.

RIGHT-CLICKING

Regardless of which tool is active, you can select an object by right-clicking on it once. When you right-click to select an object a contextual menu also appears, displaying the object's edit tools. See [Contextual Menus on page 10](#).

If a drawing tool is active and you right-click to select an object, you can unselect it by left-clicking in an empty space in the drawing area. Although a drawing tool is active, it is not used. If you then left-click a second time, the active tool will be used.



SELECTING MULTIPLE OBJECTS


Groups of objects can be selected by holding down either the **Shift** or **Ctrl/⌘** key when the **Select Objects**  tool is active and then clicking and dragging to draw a rectangular marquee around the objects to be selected. An object does not need to be completely enclosed by the marquee to be selected: it will be selected if the marquee includes only a small portion of it.


You can also select a group of objects by adding them to the selection set one by one. Select an object, hold down either the **Shift** or **Ctrl/⌘** key, and click additional objects to select them. To remove an object from a selection set, click on it once more with the **Ctrl/⌘** key pressed.

Both Text and Arrow Lines and polylines can be selected using this method, but the ability to edit the group-selected objects is limited when they are not the same object type.

Editing Text

Once created, **Text**  objects and **Arrow Lines**  can be selected individually or as a group and edited using the edit handles, the Edit Toolbar buttons, and their specification dialogs. See *Rich Text Specification Dialog on page 40*.

To select a **Text** object or **Arrow Line**, click on it using either the tool used to create it or the **Select Objects**  tool. See *Selecting Text Objects on page 43*.


Sometimes, multiple **Text** objects or **Arrow Lines** are located close to one another, making it difficult to select a particular object. Click as close as you can to the desired object, then click the **Select Next Object**  edit button or press the **Tab** key until the object is selected.


EDITING TEXT ATTRIBUTES

Most text attributes, including the font, size, style, and the content itself, are edited in the Text Specification dialog.


In order to edit the attributes of an existing **Text** object, you must select some or all of the text before making changes. See *Text Panel on page 40*.

To edit Text attributes


1. Select a **Text** object and click the **Open Object**  edit button.
2. On the **TEXT** panel of the Rich Text Specification dialog, click and drag to select some or all of the text typed into the Text field.

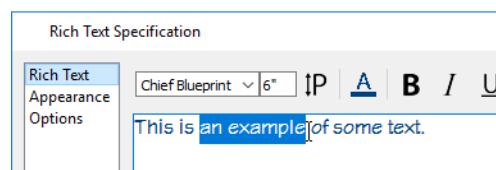

3. With some or all of the text selected, change any of the attributes available along the top of the panel, including the font, size, color, and style.

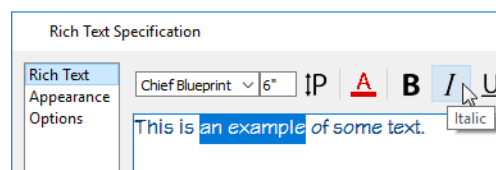


4. As changes are made, the selected text updates. Only the selected text is modified.

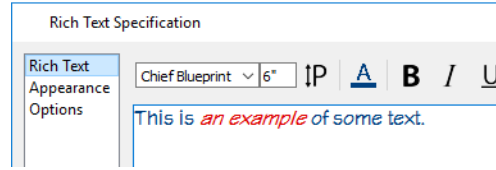

USING THE EDIT HANDLES

When a **Text** object or **Arrow Line** is selected, it displays edit handles. Use the edit handles to resize, extend/contract, move, and rotate the selected object.

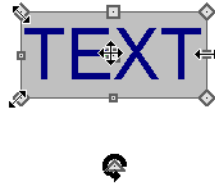

As a text box's width is made narrower or wider using an edit handle, its height may increase or decrease so that none of the text becomes hidden. The opposite is not true, however: a text box's height cannot be resized smaller than the height of the rows of text it currently contains.

Arrow Lines can also be connected to form polylines that can be reshaped using the edit handles.





USING THE EDIT TOOLS




A selected **Text** object can be edited in a variety of ways using the buttons on the Edit Toolbar, which is located at the bottom of the program window when a Text object or Line with Arrow is selected.

A selected **Text** object or **Arrow Line** can be copied or deleted using the Edit Toolbar buttons.

To copy and paste an object

1. Click on the text or arrow line to select it.
2. Click the **Copy/Paste**  edit button.
3. Click anywhere in the drawing area to paste the copy at that location.
4. To make multiple copies, click the **Sticky Mode**  edit button before clicking in the drawing area. With **Sticky Mode** enabled, you can continue to click to paste as many copies of the object as needed.

When you are finished, click the **Main Edit Mode**  edit button or select another tool.

You can also **Cut** , **Copy** , and **Paste**  a selected object by selecting these options from the **Edit** menu. These are the same as the standard Windows commands.

To delete an object, select it and click the **Delete**  edit button or press the **Delete** key.

RESIZING TEXT

The character height of **Text** objects can be specified in their specification dialogs.

ALIGNING TEXT


The text content of a text object can be aligned to the left, right, center or justified in the Rich Text Specification dialog. See [Text Panel on page 40](#).


Copying and Pasting Text Objects


Text and Arrow Lines can be copied and pasted into plan views, cross section/elevation views, and layout pages. They cannot be pasted into 3D camera views, however.

CUT, COPY, AND PASTE

 
The Cut, Copy, and Paste tools allow you to copy a selection to the system clipboard and then paste it into a different view window, onto a different floor level, or even into a different application.

 Select **Edit> Cut** or press **Ctrl/⌘ + X** to remove the selected object(s) from the file and save them in the system clipboard so that the selection can be pasted in a different location in Chief Architect or in another application, depending on the type of selection.

 Select **Edit> Copy** or press **Ctrl/⌘ + C** to save a copy of the selected object(s) to the system clipboard while maintaining the original(s). The selection can then be pasted in a different location in Chief Architect or in another application, depending on the type of selection.

 Select **Edit> Paste** or press **Ctrl/⌘ + V** to enable Paste mode, then left- or right-click in the current view to paste the selected object(s) previously copied to the system clipboard at that location. If pasting from another application, click in the destination view in Chief Architect first to make sure it is active.

To Cut, Copy, and Paste Text Objects

1. Select a text object or objects to copy, then:
 - Select **Edit> Cut** or press **Ctrl/⌘ + X** to remove the original selection from the file and copy it to the system clipboard.
 - Select **Edit> Copy** or press **Ctrl/⌘ + C** to copy the selection to the clipboard while retaining the original.
2. If you wish to paste the copy in a different view or program window, open that window and click in it to make it active.
3. Select **Edit> Paste** from the menu or press **Ctrl/⌘ + V**.
4. When pasting in Chief Architect, the mouse pointer will display the Copy/Paste  icon. Left- or right-click once to paste a copy of the object at that location.

Ctrl/⌘ + X, **Ctrl/⌘ + C**, and **Ctrl/⌘ + V** can also be used to cut, copy, and/or paste text in Text field of the Rich Text Specification dialog. The menu commands are not available when this dialog is open, however. See [Rich Text Specification Dialog on page 40](#).


To Copy, Cut and Paste text characters

1. On the TEXT panel of the Rich Text Specification dialog, or in another program altogether, highlight the text you wish to cut, copy or paste.
2. Press **Ctrl/⌘ + X** to **Cut** the selected text out of its original location and save it to the system clipboard.
3. Press **Ctrl/⌘ + C** to **Copy** the selected text to the system clipboard without removing it from its original location.


 
4. Open the Rich Text Specification dialog of a different text object or a file in another application and click to place your cursor in the Text field, writing area, or spreadsheet cell.
5. Press **Ctrl/⌘ + V** to **Paste** the copied text into the view.

Bear in mind that when text is copied and pasted, its formatting is not always retained. The results depend on the program in which the content was created.

COPY/PASTE



 The **Copy/Paste** edit tool allows you to copy the selected object(s) to the system clipboard and immediately enable the Paste function so that a copy can be made in the current view. Edit handles and a variety of edit tools let you control the location, orientation, and shape of the pasted object(s).

To Copy/Paste by clicking


1. Select an object or objects to copy.
2. Click the **Copy/Paste**  edit button. The cursor displays the Copy/Paste  icon.
3. Left- or right-click once to paste a copy of the selection at that point where you clicked.


The Copy/Paste edit tool can be used in combination with the original selection's edit handles to move, rotate, or reshape the copy relative to the original. The available edit handles will vary depending on the type and number of objects selected. See [Edit Handles on page 12](#).

To Copy/Paste by dragging

1. Select an object or objects to copy.
2. Click the **Copy/Paste**  edit button. The cursor displays the Copy/Paste  icon.
3. Click and drag an edit handle:
 - Drag the Move edit handle to position the copy at a new location. As you drag, a preview of the selection follows the mouse pointer.
 - CAD lines and some line-based objects have a round Orthogonal Move edit handle. When dragged, movement is restricted to directions that are perpendicular to the selected line.
 - Other types of CAD and CAD-based objects have a round Concentric Resize edit handle. Click and drag this handle to create a concentric copy that is either larger or smaller than the original.
 - Drag a corner handle to create a copy in the same location as the original but with a different shape.
 - Drag the Rotate handle to create a copy in the same location as the original, but rotated to a different angle.
4. You can position the copy accurately with respect to the original by watching the moved distance in the Status Bar at the bottom of the screen.

STICKY MODE


 Normally, after an action is performed using the edit tools or handles while in Paste mode, you return to the Main Edit Mode. Click the **Sticky Mode** edit button to remain in Paste mode and continue pasting copies of the selected object(s).

To exit Paste mode and return to the main Edit Toolbar for the selected object, click the **Main Edit Mode**  edit button, or press the **Esc** key. You can also click the **Sticky Mode** button once more.

Arrow Lines

Arrow Lines can be used to connect text objects to details of interest in your drawing.

ARROW LINE

 Select **Tools> Arrow Line** and then click and drag to draw an Arrow Line that can attach to Text objects and point to whatever you wish in the drawing.

The endpoints of Arrow Lines can be joined to form polylines with corners that can be adjusted using the edit handles.

ATTACHING TEXT ARROWS TO OBJECTS

An Arrow Line can be attached to a Text object anywhere within its bounding box in plan view, but attaches to a closed polyline-based object along its edges.


Arrow Lines that have the same Line Style and Arrow attributes can be snapped together to form open or closed polylines. If two lines with arrows meet within the bounding box of a text object, however, they will not join. This allows you to attach multiple, separate text arrows to a single text object.

Arrow Lines can be independent or attached to other objects at both their tail and head ends. Arrows attach to closed polyline-based objects along their edges, but can attach to Text or an architectural object anywhere within its bounding box in plan view.

- When a selected Arrow Line is attached to an object on either end, its end edit handle will display a red fill color.
- If an attached object is moved, the end of the Arrow Line will move, as well.
- If a text arrow is attached to text or another object, deleting either the text or the object will also delete the text arrow.

AUTO POSITION ARROWS

The following image illustrates the behavior of Auto Positioning. When the head of the arrow line is moved, the tail of the arrow snaps to different Auto Position locations on the text object, maintaining its connection.

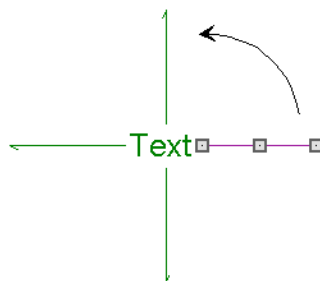

Editing Polylines

Arrow Polylines are created when multiple Arrow Lines are connected end-to-end. Polylines are described as open when they do not form an enclosed area; when they enclose an area, they are referred to as closed polylines.

USING THE EDIT HANDLES

When selected, an open polyline-based object displays a Move handle, a Rotate handle, a Reshape handle at the intersection of each segment, and an Extend handle at each end.


When selected:

- An open Arrow Polyline displays a Move handle, a Rotate handle, a Reshape handle at the intersection of each segment, and an Extend handle at each end.
- A closed Arrow Polyline displays a Move handle, a Rotate handle, and a Reshape handle at the intersection of each segment.

Each straight, line-based segment also has a Move edit handle along its length.

Any action performed using the edit handles can be canceled by pressing the *Esc* key or any two mouse buttons at the same time.

USING THE SPECIFICATION DIALOG

 Arrow Polylines can be edited using their specification dialogs. See *Line/Polyline Specification Dialog on page 49*.

USING THE EDIT TOOLBAR

A selected Arrow Polyline can be edited in a variety of ways using the buttons on the Edit Toolbar.

The following toolbar buttons may display on the Edit Toolbar for a selected Arrow Polyline:



Select Next Object selects nearby objects instead of the selected object. See *Selecting Text Objects on page 43*.



Open Object opens the specification dialog for the selected object. See *Specification Dialogs on page 11*.




Copy/Paste copies the selected object(s) to the system clipboard so they can be pasted elsewhere. See *Copying and Pasting Text Objects on page 46*.




Delete deletes the selected object(s). See *Deleting Objects on page 51*.


Line/Polyline Specification Dialog

 Select an Arrow Line and click the **Open Object** edit button to open the Line Specification dialog. If the object is composed of multiple segments, the Polyline Specification dialog will open instead.

LINE STYLE PANEL

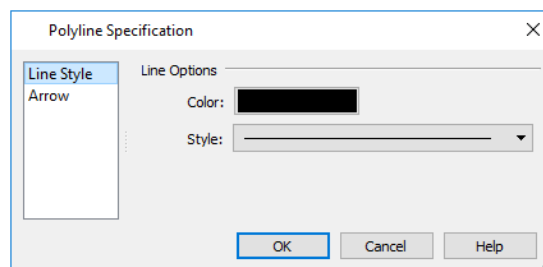


- Click the **Line Color** box to specify a new line color. See [Select Color Dialog on page 36](#).




Mouse over the Color bar to display a tool tip reporting the selected color's RGB values.

- Click the **Line Style** drop-down list to select from a variety of available line styles.


ARROW PANEL

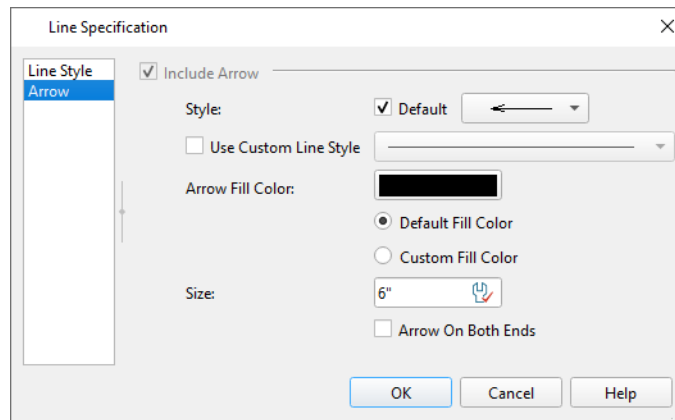

- Select an arrowhead **Style** from the drop-down list. Check the **Default** box to use the default arrow Style.
- When **Use Custom Line Style** is unchecked, the selected object's arrow(s) use the same line style as the rest of the object. Check this box to select a different line style from the drop-down list.
- The **Arrow Fill Color** box to displays the currently selected fill for the arrowhead. Click this button to select a custom color if you wish. See [Select Color Dialog on page 36](#).
 - Select **Default Fill Color** to use the default color for text arrows in the current plan.
 - **Custom Fill Color** becomes selected automatically if you choose a custom color above.
- Specify the arrowhead's **Size**. The Active Defaults  icon indicates that default size is being used.
- Check the box beside **Arrow On Both Ends** to create a two-headed arrow.

FILL STYLE PANEL

The FILL STYLE panel is available for Arrow Lines consisting of multiple segments that form a closed polyline shape. It is not available for lines or open polylines.

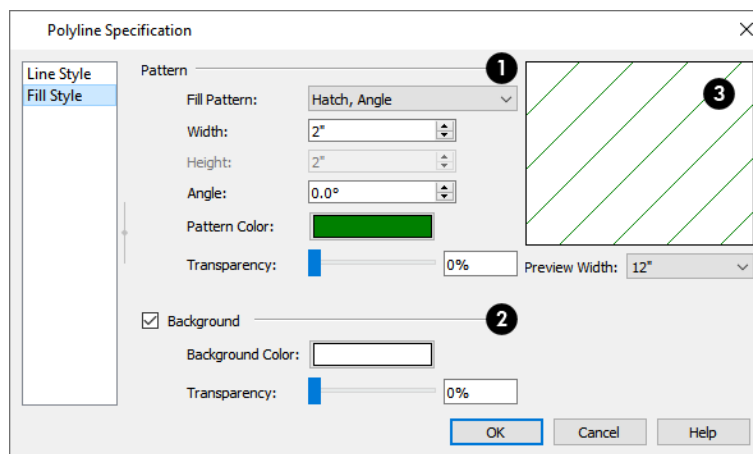

1 Pattern

Select a **Fill Pattern** from the drop-down list and specify its characteristics.

2 Background

Check **Background** to add a solid background color to the fill pattern and enable the settings below. When unchecked, the fill pattern has a transparent background. Not available when “Solid” is the selected Pattern Type.



- Specify a custom **Background Color** by clicking the color bar.
- Use the **Transparency** slider bar or text field to control how transparent the background color is.

3 Preview

A preview of the selected pattern displays to the right. As changes are made to the settings on this panel, the preview will update.


- Choose a **Preview Width** from the drop-down list. This value controls how large an area the preview represents. The selected value indicates the horizontal width of the preview pane in actual plan inches (mm).

Deleting Objects

Objects that you have drawn in Chief Architect Viewer can be deleted in several ways: select an object or group of objects, then click the **Delete**  edit button, select **Edit> Delete**  from the menu, or press the **Delete** key on your keyboard.

Objects that are a part of the original drawing cannot be selected, edited, or deleted in Chief Architect Viewer.

DELETE SURFACE

 In any 3D view, select **3D> Delete Surface**, then click a surface in the view to temporarily remove the surface from the current view, allowing you to see what is behind it.

Multiple Floor Levels

Chapter 6

Chief Architect plan files can have up to 30 floors, plus a foundation and attic. Chief Architect Viewer allows you to view all of them in a variety of ways.

Displaying Floor Levels


Chief Architect Viewer allows you to view the floor levels in a plan in a variety of ways.

IN PLAN VIEW

In plan view, only one floor level can be active for editing at a time. This is referred to as the Current Floor. See *The Current Floor on page 52*.

In addition to the Current Floor, one other floor can be displayed for reference purposes: the Reference Floor. Objects on the Current Floor can snap to those on the Reference Floor, helping you align objects. See *The Reference Display on page 53*.

IN 3D VIEWS

In 3D views, all floor levels in a plan are visible, with one exception: **Perspective Floor Overviews** , which show the Current Floor, not including its ceiling, plus any floors beneath it.

In 3D views, all floor levels in a plan are visible, from the foundation up to the attic. There are two exceptions:

See *3D View Tools on page 55*.

The Current Floor

In a given plan view window, only one floor level can be active at any given time. The active floor is referred to as the **Current Floor**.

If you would like to view two different floor levels side by side, open a second plan view, navigate to the desired floor, and then tile the two views. Although both are visible, only one of these view windows is active. See *Working in Multiple Views on page 28*.

FLOOR UP / FLOOR DOWN



1

If you are working with more than one floor, you can select **Tools > Floor/Reference Display > Up One Floor** or **Down One Floor** to switch from one floor to another.

You can change the Current Floor in floor plan and 3D views. The Current Floor displays on the **Change Floor/Reference**  button, which can be found between the **Down One Floor** and the **Up One Floor** buttons.

Floors become available once they have been built. The Attic and foundation levels are also accessible using these tools.

CHANGE FLOOR / REFERENCE

1 If there are multiple floors, select **Tools> Floor/Reference Display> Change Floor/Reference** to open the Change Floor/Reference dialog, where you can select both the Current Floor and which floor is used in the Reference Floor. See *The Reference Display on page 53*.

The Reference Display


 When a model has more than one floor level, it is often helpful to see how they relate to each other in plan view. Select **Tools> Floor/Reference Display> Reference Display** to turn on the display of an additional reference floor along with the Current Floor.

CHANGE FLOOR / REFERENCE DIALOG

1 Select **Tools> Floor/Reference Display> Change Floor/Reference** or click the toolbar button that reports the current floor level. See *The Current Floor on page 52*.

In the Change Floor/Reference dialog, you can specify which floor level is the Current Floor. You can also specify a Reference Floor from one or more different plan files, multiple Reference Floors, and Reference Floor layer sets and drawing order here, as well.

When this dialog is accessed from a camera view, only the Current Floor options will be active.

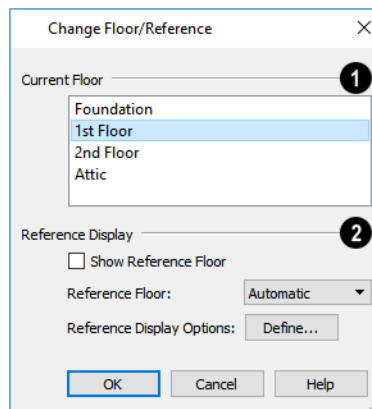

1 Current Floor

The **Current Floor** is highlighted here. Select another floor from the list to make it the Current Floor instead.

2 Reference Display

These settings are only available when a plan view is active.

- Check **Show Reference Floor** to turn on the display of the Reference Floor.
- Choose the current **Reference Floor** from the drop-down list. When “Automatic” is selected, the floor level below the Current Floor is always used; if there is no floor below, the floor above is used instead.
- Click the **Define** button to open the Layer Display Options dialog and change the settings for the Reference Floor Layer Set. See *Layer Sets on page 35*.

3D Views

Chapter 7

Little preparation is needed to create a 3D view of a model: simply click a button to create an overview or click and drag to create a camera or cross section/elevation view.

Camera Defaults Dialogs



There are several defaults dialogs for cameras, which can be accessed by selecting **Edit> Default Settings**. In the Default Settings dialog, click the arrow next to “Camera Tools”, then select a subheading and click the Edit button to open the defaults dialog associated with your selection.



There are several defaults dialogs for cameras, which can be accessed by selecting **3D> Edit Camera Defaults**. Select an item in the submenu to open the defaults dialog associated with your selection.

The settings in the Camera Defaults dialogs control the initial use of effects that improve the appearance of 3D views. Select **3D> Edit Camera Defaults** to open these dialogs.

Once a camera is created, its attributes can be customized. See *Editing 3D Views on page 66*.

FULL CAMERA DEFAULTS

Specify the initial attributes of cameras created using the **Full Camera**  tool. See *Camera Views on page 55*.

The settings in this dialog are the same as those the Full Camera Specification dialog.

PERSPECTIVE FULL OVERVIEW DEFAULTS

Specify the initial attributes of cameras created using the **Perspective Full Overview**  tool. See *Full Overview on page 56*.

The settings in this dialog are the same as those in the Perspective Full Overview Specification dialog.

PERSPECTIVE FLOOR OVERVIEW DEFAULTS

Specify the initial attributes of cameras created using the **Perspective Floor Overview**  tool. See *Floor Overview on page 56*.

The settings in this dialog are the same as those in the Perspective Floor Overview Specification dialog.

CROSS SECTION/ELEVATION DEFAULTS

Specify the initial attributes of cameras created using the **Cross Section/Elevation**  tool. See *Cross Section/Elevation Views on page 55*.


The settings in this dialog are also found in the **Cross Section/Elevation Specification** dialog. See *Cross Section/Elevation Specification Dialogs on page 76*.

3D View Tools

 Select **3D> Create Camera View** to display the Camera View Tools.

There are three types of 3D Views:


CAMERA VIEWS

 The **Full Camera** tool creates multi-floor views of the 3D model. It can be used to create interior and exterior perspectives, and is good for displaying cathedral ceilings, roofs, lofts, stairwell openings, and other variation in floor and ceiling levels.

OVERVIEWS


 The **Full Overview** tool creates views of the entire model including all floors, ceilings, and the roof.

 The **Floor Overview** tool creates views of the current floor with the ceiling removed and all floors beneath it visible.

 The **Framing Overview** tool creates views of the framing in the model. Framing must be present in the plan in order for it to display in a framing overview. See [Framing Overview on page 57](#).

CROSS SECTION/ELEVATION VIEWS


Cross Section/Elevation views are similar to the traditional, scaled orthographic views often used in drafting. They are scaled and can be fully annotated. See [Cross Section/Elevation Views on page 57](#).


 A **Cross Section/Elevation** view displays all floors of the model. If the view is created outside the structure looking toward it, the result is an exterior elevation. If the view is created inside the structure, or passes through any of the structure, a cross section is created.

Creating Camera Views

All Camera views are created using the same method.

To create a camera view

1. In plan view, select the desired camera tool. The mouse pointer displays the camera  icon.
2. Click and drag a line to define the view direction.

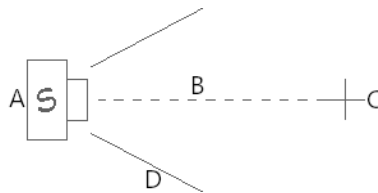

- A. Camera Position (click)
- B. Line of Sight (drag)
- C. Focal Point (release)
- D. Field of View

- The camera's position is where you click to begin the line.
 - The line that you drag defines the direction the camera is pointed.
 - The end of the line is the focal point of the view, the point the camera rotates around.
 - The Field of View is 55°.
3. When you release the mouse button, a view generates in a new window.
 4. Return to the plan view. A camera symbol now displays in plan view. See [Working in Multiple Views on page 28](#).

A new camera can also be created by copying and pasting an existing camera symbol selected in plan view. See [Copying and Pasting Text Objects on page 46](#).

CAMERA HEIGHT

By default, Cameras are created at a height of 60" (1500 mm). Where this height is measured from depends on the location of the camera:

- If the camera is inside a room, it is measured from that room's subfloor.
- If the camera is located in neither a room nor within the Terrain Perimeter, it is measured from the default height of the subfloor for the current floor.

Once created, a camera's height can be modified in its Camera Specification dialog. See [Camera Specification Dialogs on page 73](#).

Creating Overviews


In Chief Architect, there are three different overview types: Full, Floor, and Framing Overviews.

Overviews generate as soon as you select the tool and are always created at the same 120° angle. The initial focal point is located at the center of the architectural model: the terrain is not taken into consideration determining its position. The distance of the camera from the model will vary depending on its size: the larger the architectural model, the further away the camera will be from the focal point so that the entire model can be seen in the view.


Once generated, an overview window's title bar indicates its view type and a camera symbol in plan view represents its location. An overview camera can be edited much like regular camera views can. See [Editing 3D Views on page 66](#).

FULL OVERVIEW


 Select **3D> Create Camera View> Perspective Full Overview** to generate an exterior view of the entire model.

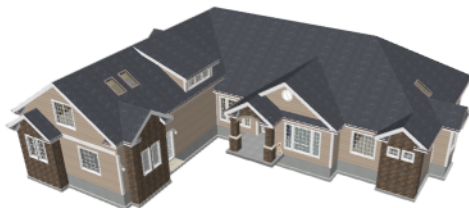

FLOOR OVERVIEW


 Select **3D> Create Camera View> Floor Overview** to create a view of the current floor with the ceiling removed and all floors beneath it visible.


Floor Overviews are an effective tool for illustrating traffic flow and the relationships between spaces.

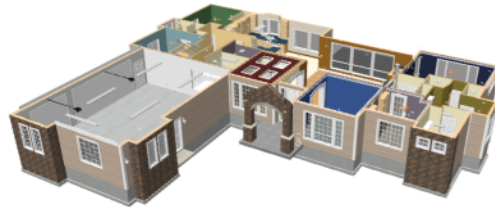

To see a different floor, select **Tools> Floor/Reference Display> Up One Floor**  or **Down One Floor** . You can also return to plan view and make another floor current before generating the Floor Overview.

FRAMING OVERVIEW

 Select **3D> Create Camera View> Framing Overview** to create a view of the entire model, displaying only framing and the foundation.

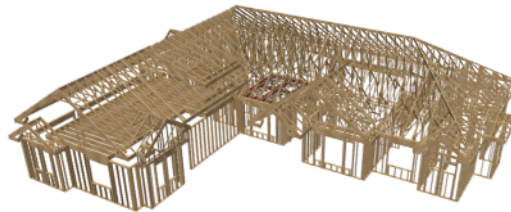



Framing overviews include all floor, wall, and roof framing as well as foundations. Framing must be created before generating a Framing Overview or the view will be empty aside from any foundation walls on Floor 0.

Cross Section/Elevation Views



Cross section/elevation views are the only 3D views that can be annotated with the Text tools. If Text is added to a cross section/elevation view, the program will prompt you to save the view before closing the window. This information is then stored in the view. See [Text on page 38](#).


CREATING CROSS SECTION/ELEVATION VIEWS

 A **Cross Section/Elevation** view displays all floors of the model. The cross section begins at the point where the camera arrow is drawn and continues through the entire model.

 The **Wall Elevation** tool creates an interior elevation of a single wall defining the room that the camera is drawn in. It creates a 2D projection of that wall and the objects located between that wall and its Cross Section Line; does not cut through walls or show the ceiling, floor, or roof; and is used primarily for kitchen and bath elevations. This tool cannot be used to create exterior views.

To create a cross section/elevation view

1. Select the **Cross Section/Elevation**  or **Wall Elevation** tool. The pointer changes to a  with crosshairs marking the position of the pointer.
2. Click and drag a line in plan view.
 - A Camera symbol displays where you click, along with a Cross Section Line indicating the plane of the camera's cross section cut line.

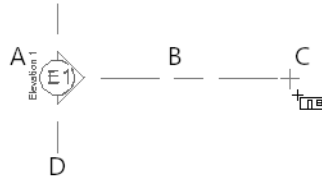

- A. Camera location (click)
- B. Line of Sight (drag)
- C. Focal Point (release)
- D. Cross Section Line

3. Drag in the direction of the Line of Sight to draw a camera arrow.
 - Always drag the camera arrow perpendicular to the wall to be viewed.
4. When you release the mouse button, the view generates in a new window.
5. Once created, a cross section/elevation view's extents can be edited. See *Cross Section/Elevation Specification Dialogs on page 76*.

A new cross section/elevation view can also be created by copying and pasting an existing cross section/elevation camera symbol selected in plan view. See *Copying and Pasting Text Objects on page 46*.


If the Line of Sight does not cut through a 3D object and the object is within the back clipped distance, such as a window shown in elevation, the object retains its 3D definition and can be selected, moved, stretched, or otherwise modified in the view. The 3D model is updated in all views.

Displaying 3D Views

A variety of tools and settings allow you to control the appearance of 3D views. There are also numerous ways to adjust a 3D view's position, focal point and field of view. See *Editing 3D Views on page 66*.

The name of the current plan file and the type of view displays at the top of each view window in its title bar. If a 3D view is saved, its name also displays.

There is no limit to the number of 3D view windows that you can have open at a given time; bear in mind, though, that each window demands use of your computer's resources and that you may see poor performance if too many views are open. See *Working in Multiple Views on page 28*.

 The 3D model will rebuild automatically as you draw; however, if you notice any anomalies in the model in 3D, select **3D> Rebuild 3D** to regenerate all 3D data associated with the current plan. All open views will remain open.


LAYER DISPLAY OPTIONS

As in plan view, the display of objects in 3D views can be controlled by layer. See *Layer Display Options Dialog on page 34*.

Different view types use different layer sets when they are created. See *Layer Sets on page 35*.



IN PLAN VIEW

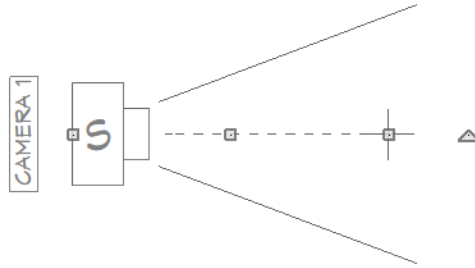Cameras are represented in plan view by symbols that indicate the camera's position, field of view and focal point.



You can also display camera symbols for saved cameras when the “Cameras” layer is turned on. See [Display Layers on page 34](#).

The symbols for Elevation views and Full Overviews display on all floors, while those for Full Cameras and Dollhouse Views display only on the floor where the view was created. See [Creating Camera Views on page 55](#).

You can move a camera to a different floor by clicking the **Up One Floor**  or **Down One Floor**  button while the camera view is active. Note that this may affect what is seen in the view as well as its display in plan view. See [Floor Up / Floor Down on page 52](#).

Both saved and unsaved active cameras can have labels indicating the camera number or its name. Camera labels are located on the “Cameras, Labels” layer.

Camera labels are numbered sequentially in each plan in the order they were created.



Camera symbols are an on-screen reference: they do not print unless **Print Image** is used

IN RENDERED VIEWS


There are a number of factors that contribute to the appearance of rendered 3D views. See [3D Rendering on page 78](#).

IN VECTOR VIEWS

There are also a number of factors that affect the appearance of 3D Vector Views:

- Select **3D> Toggle Patterns**  in a Technical Illustration or Vector View to turn on or off the display of the “Patterns, 3D Views” layer, which controls the display of material pattern lines. See [Display Layers on page 34](#).
- Select **View> Color**  to toggle between color and black and white to control the display line and fill colors.

DELETE 3D SURFACE


 The individual surfaces that make up objects can be temporarily removed from any 3D view by selecting **3D> Delete Surface** and then clicking on a surface. When the pointer is over a surface, that surface will become highlighted.

Surfaces removed in one view are removed in all 3D views, but are not permanently removed from the model. Continue clicking surfaces to remove them, then select another tool when you are finished.

Surfaces in 3D views are composed of multiple triangles. Hold the **Alt** key while clicking to delete one triangular face at a time rather than all triangles forming a surface.

To restore the most recently deleted surface, select **3D> Delete Surface**  or click the toolbar button.

There are several ways to restore all deleted surfaces:

- Select **Build> Floor> Rebuild Walls/Floors/Ceilings** .
- Exit the 3D view and reopen it.

- Create a new 3D view.

Navigating in Camera Views

 
Once a 3D view is created, there are many ways to manipulate the camera location and the direction of its line of site using the mouse, the keyboard, and the menus.



When the keyboard, toolbar buttons, or menu commands are used to move or rotate a camera, the adjustments occur in regular increments. The size of these increments is specified in the Camera Specification dialog:

- The **Incremental Move Distance** controls Panning movement and forward and backward Dolly movement.
- The **Incremental Rotate Angle** controls Orbit movement, Tilt movement, and side to side Dolly movement.

See *Camera Specification Dialogs on page 73*.

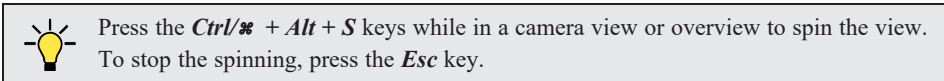Each time you move the camera, the view is updated. If you are using either the toolbar or keyboard to move the camera, you can hold down the **Shift** key, suppressing the redraw of the view until the **Shift** key is released and allowing you to move multiple increments more quickly.



You can also move a camera to a different floor by clicking the **Up One Floor**  or **Down One Floor**  button while the camera view is active. Note that this may affect what is seen in the view as well as its display in plan view. See *Floor Up / Floor Down on page 52*.

MOUSE SCROLL WHEEL AND TRACKPAD

3D views can be panned and zoomed when any tool is active using the mouse scroll wheel or trackpad gestures. See *Trackpads on page 9*.

The program adjusts the speed of these actions depending on characteristics of the camera:

- Zoom speed depends on how close the camera is to the object located behind the mouse pointer. When the target object is far from the camera, zooming is faster; as the camera gets closer to the target, zooming slows.
- Regardless of the camera's distance from the target object, you can speed up zooming by holding down the **Shift** key or slow down zooming by holding down the **Ctrl/⌘** key.
- Panning speed depends on the length of the camera's Line of Sight. In general, it is likely to be faster in an exterior view of a large model, slower in an interior view of a small room. See *Creating Camera Views on page 55*.

By default, panning and zooming adjusts the position and direction of the camera. It does not, however, adjust the distances at which surfaces are clipped. This means that if you zoom in closely on an object, some of its surfaces may be removed from the view. One way to avoid this is to lower the camera's **Clip Surfaces Within** value in the Camera Specification dialog. See *Camera Specification Dialogs on page 73*.


3DCONNEXION® 3D MICE

3Dconnexion®'s 3D mice can be used to navigate in all views - including camera views and overviews.


In the Windows version of Chief Architect, preprogrammed view direction hotkeys are supported on devices with buttons for that purpose. MacOS™ does not provide mapping support to the view direction commands.





Rolling is not supported in Chief Architect. In addition, 3D mice cannot be used to move the mouse pointer. For details about using your 3D Connexion® mouse, refer to its documentation.



GAMEPADS

 In the Windows version of Chief Architect, gamepads can be used to navigate in camera views, overviews, and elevation views. To use a gamepad in Chief Architect, Select **Tools> Toolbars and Hotkeys> Gamepad Settings**, then check **Enable Gamepad** in the Gamepad Settings dialog. You can also adjust the sensitivity and other aspects of thumbstick functionality when used in Chief Architect. See *Gamepad Settings Dialog on page 64*.

MOVE CAMERA WITH MOUSE

 An active camera’s position can be edited using the mouse. Select **3D> Move Camera With Mouse** to access the Move Camera with Mouse modes, select a mode, and use the left mouse button for the primary behavior or the right mouse button for the secondary behavior. These tools are not available in cross section/elevation views.

Tool	Primary Behavior (Left-Click)	Alternate Behavior (Right-Click)
Mouse-Orbit Camera 	<p>Left-click and drag to rotate the camera around its focal point. The camera’s position and direction both change.</p> <p>You can temporarily activate Mouse-Tilt Camera by using the right mouse button while the Mouse-Pan Camera or Mouse-Tilt Camera mode is active.</p> <p>To continuously rotate the camera around its focal point, left-click in the 3D view, drag the mouse, and release the mouse button to “throw” the view. Click again in the view to stop it from rotating.</p>	<p>Right-click and drag to tilt the camera instead of orbiting.</p>
	<p>In the Mac version of the software, you can temporarily activate Mouse-Orbit Camera while another tool is active: hold down the <i>Option + Shift</i> keys, then left-click and drag. When the mouse button and keys are released, the previously active tool will again be active.</p>	
Mouse-Pan Camera 	<p>Left-click and drag to move the camera in any direction. The camera’s position changes, but its direction does not.</p>	<p>Right-click and drag to orbit instead of panning.</p>
Mouse-Dolly Camera 	<p>Left-click and drag up and down to move the camera forward and backward or drag left or right to rotate the camera side to side.</p>	<p>Right-click and drag to tilt the camera instead of dollying.</p>
Mouse-Tilt Camera 	<p>Left-click and drag in any direction to tilt the camera, changing its view direction but not its position.</p> <p>You can temporarily activate Mouse-Tilt Camera by using the right mouse button while the Mouse-Orbit Camera or Mouse-Dolly Camera mode is active.</p>	<p>Right-click to orbit instead of tilting.</p>

Tool	Primary Behavior (Left-Click)	Alternate Behavior (Right-Click)
3D Center Camera on Point 	<p>Lets you focus the camera at a particular point in the scene. This changes the camera’s direction and focal point, but not its position.</p> <p>To use this tool, activate it and then click on any object in the scene.</p>	N/A
3D Focus on Object 	<p>Lets you focus on a specific object by changing the camera’s position, direction, focal point, and the length of its line of sight.</p> <p>To use this tool, activate it and then click on an object in the scene. Alternatively, select an object in the view and click the Focus on Selected edit button.</p>	N/A


MOVE CAMERA WITH KEYBOARD

An active camera’s position can be changed using the Arrow keys on your keyboard. **Select 3D> Move Camera with Keyboard** to access the Move Camera with Keyboard modes. These modes are not available in Cross Section/Elevation views.



These modes use the Incremental Move Distance and Incremental Rotate Angle set in the active 3D view’s Camera Specification dialog.





- **Keyboard-Orbit Camera** lets you use the keyboard to rotate the camera around the focal point. The camera’s position and direction both change.
- **Keyboard-Pan Camera** lets you move the camera up, down, right, and left using the keyboard. The camera’s position changes, but its direction does not.
- **Keyboard-Dolly Camera** lets you move the camera forward and back using the *Up* and *Down* Arrow keys, and rotate side to side using the *Left* and *Right* Arrow keys.
- **Keyboard-Tilt Camera** lets you use the Arrow keys to tilt the camera up, down, or side to side to change the focal point. The camera’s direction changes, but its position does not.

MOVE CAMERA TOOLS


 Select **3D> Move Camera** in a 3D view to access these tools. These tools change the active camera’s position but not its direction, and are not available in Cross Section/Elevation views.

These tools use the Incremental Move Distance set in the active 3D view’s Camera Specification dialog.







	Description
	Move Camera Forward moves the camera and its focal point forward.
	Move Camera Back moves the camera and the focal point back.

	Description
	Move Camera Left moves the camera and the focal point to the left in a line perpendicular to the line of sight.
	Move Camera Right moves the camera and the focal point to the right in a line perpendicular to the line of sight.
	Move Camera Up moves the camera and the focal point up.
	Move Camera Down moves the camera and the focal point down.


ORBIT CAMERA TOOLS

 Select **3D> Orbit Camera** in a 3D view to access these tools. Orbiting the camera rotates it about the focal point using the Incremental Rotate Angle set in the active view's Camera Specification dialog.





These tools are not available in Cross Section/Elevation, Elevation Defaults views.

	Description
	Move Camera In moves the camera closer to the focal point along the line of sight. The camera cannot move past the focal point using this tool.
	Move Camera Out moves the camera away from the focal point along the line of sight.
	Orbit Camera Upward rotates the camera up about the focal point. The camera cannot rotate past a vertical line looking straight down on the focal point.
	Orbit Camera Downward rotates the camera down about the focal point. The camera cannot rotate past a vertical line looking straight up at the focal point.
	Orbit Camera Left rotates the camera to the left about the focal point.
	Orbit Camera Right rotates the camera to the right about the focal point.


TILT CAMERA TOOLS








 Select **3D> Tilt Camera** to access these tools. Tilting keeps the camera in one place and pivots the camera about its vertical or horizontal axis. This movement uses the Incremental Rotate Angle set in the active view's Camera Specification dialog and is similar to tilting your head up and down or turning it side-to-side.

These tools are not available in Cross Section/Elevation views.


	Description
	Tilt Camera Upward tilts the camera up while keeping it in the same location. The camera cannot tilt beyond the vertical position.
	Tilt Camera Downward tilts the camera down while keeping it in the same location. The camera cannot tilt beyond the vertical position.
	Turn Camera Left turns the camera to the left while staying in the same location.
	Turn Camera Right turns the camera to the right while staying in the same location.


VIEW DIRECTION TOOLS

 The View Direction Tools allow you to view the model from a specific direction in a camera view or overview. While one of these views is active, select **3D> View Direction** to access these tools.

	Description
	Front View creates a front view of the model.
	Back View creates a back view of the model.
	Top View creates a top view of the model.
	Bottom View creates a bottom view of the model.
	Left Side View create a left side view of the model.
	Right Side View create a right side view of the model.
	Restore Original View restores the original view position. This option is also available for material previews in the Library Browser and Define Material dialogs.

Gamepad Settings Dialog

 The Gamepad Settings dialog allows you to specify thumbstick behavior in Chief Architect. Select **Tools> Customize Gamepad** to open this dialog. See [Gamepads on page 61](#).

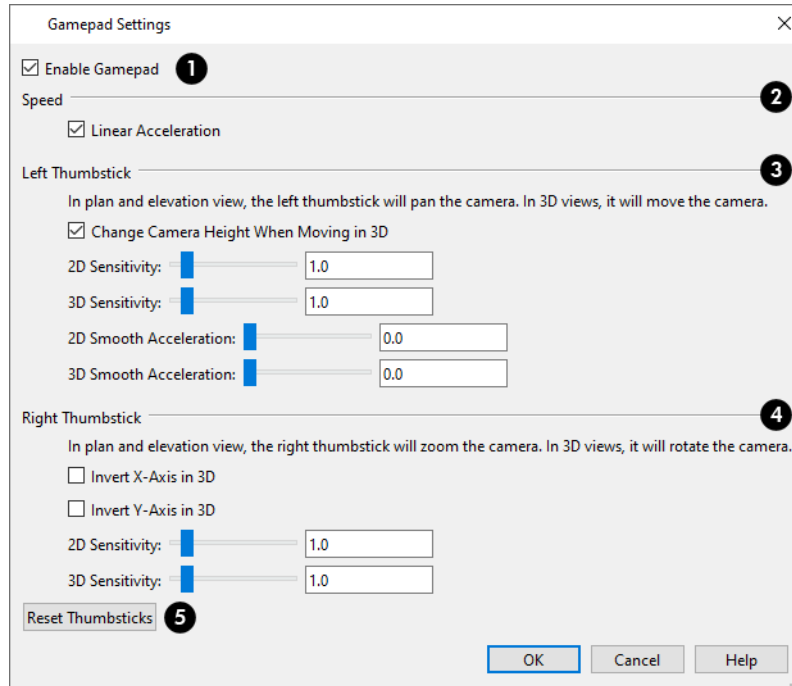

1 Enable Gamepad

Check this box to allow Chief Architect to recognize a gamepad on your system and enable the other settings in this dialog.

2 Speed

When **Linear Acceleration** is checked, camera acceleration is always directly proportional to the amount the thumbstick is pushed. When unchecked, acceleration is increased on a curve, allowing more precision on the low end, and more speed on the high end.

3 Left Thumbstick

- When **Change Camera Height When Moving in 3D**, the left thumbstick can be used to change the camera height in 3D. Uncheck this to maintain a consistent camera height instead.
- Use the slider bar or text field to specify the **2D Sensitivity**, which controls how quickly the view pans in plan and elevation views.
- Use the slider bar or text field to specify the **3D Sensitivity**, which controls how quickly the camera moves in 3D views.
- Use the slider bar or text field to specify the **2D Smooth Acceleration**, which controls how the speed at which acceleration and deceleration occur in 2D views.
- Use the slider bar or text field to specify the **3D Smooth Acceleration**, which controls the speed at which acceleration and deceleration occur in 3D views.

4 Right Thumbstick

- When **Invert X-Axis in 3D** is unchecked, pushing the right thumbstick to the left rotates the camera to the left. When checked, pushing this thumbstick to the left rotates the camera to the right.
- When **Invert Y-Axis in 3D** is unchecked, pushing the right thumbstick to the up rotates the camera upward. When checked, pushing the thumbstick up rotates the camera downward.

- Use the slider bar or text field to specify the **2D Sensitivity**, which controls how quickly the view zooms in plan and elevation views.
- Use the slider bar or text field to specify the **3D Sensitivity**, which controls how quickly the camera rotates in 3D views.

5 Reset Thumbsticks

Click this button to restore the default Left and Right Thumbsticks settings.

Editing 3D Views

In addition to changing its position and direction, there are numerous ways to modify a 3D view's specifications as well as add annotations. See [Detailing Cross Section/Elevation Views](#).

If you make changes to an open camera view that was saved previously, you will be prompted to resave the view when you close it.

You can edit a 3D view in plan view without closing it. See [Working in Multiple Views on page 28](#).

IN THE SPECIFICATION DIALOG

You can make adjustments to a camera in its specification dialog. This dialog is particularly helpful for making fine adjustments to the camera's position, appearance, and other attributes. See [Camera Specification Dialogs on page 73](#) and [Cross Section/Elevation Specification Dialogs on page 76](#).




Tile a 3D view and plan view and use the camera movement tools to see how they affect the camera. See [Tiling Views on page 28](#).

USING THE EDIT TOOLS

A camera symbol or symbols selected in plan view can be edited in a variety of ways using the buttons on the Edit Toolbar.

USING THE EDIT HANDLES

Using the **Select Objects**  tool, select the camera object. When a camera symbol is selected, it displays four edit handles.

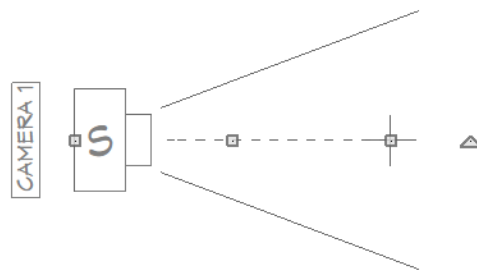

- Drag the square **Line of Sight** handle located on the camera symbol to change the camera angle without moving the focal point.
- Drag the square **Move** handle located on the line of sight to reposition the camera while maintaining its relative angle.
- Drag the square **Focal Point** handle located at the end of the line of sight to reposition the focal point and change the line of sight without moving the camera.

 
- Drag the rectangular **Rotate** handle to rotate the camera's line of sight about its center, moving both the camera and its focal point.

If you make changes to a camera symbol using its edit handles in plan view, its 3D view will be affected.

Multiple camera symbols can be selected; however, their editing options are limited to being moved, rotated, and deleted.


USING THE CONTEXTUAL MENU

In a 3D view, right-click in an empty space in which the backdrop or background color displays to access the contextual menu. See *Contextual Menus on page 10*.

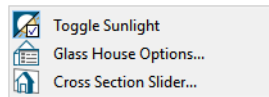

- In Vector Views, the options are a selection of commonly used commands from the File, Edit, Tools and Window menus.
- In the other Rendering Techniques, the options are a selection of tools and toggles specific to the current view.


UP ONE FLOOR/DOWN ONE FLOOR

 You can move a camera to a different floor. While the camera view is active, select **Tools> Floor/Reference Display> Up One Floor** or **Down One Floor**. Note that this may affect what is seen in the view as well as its display in plan view. See *In Plan View on page 58*.

The position and movement of a camera is affected by its location within the model. When the camera is outside a building, its height is relative to the terrain and follows the terrain as it is moved. When inside a building, the camera height is relative to the floor of the room it is drawn in.

If the camera is on an upper floor and you move the camera outside the building, the camera remains at the same height relative to the floor it was created on.

ZOOMING


 The Zoom Tools are available in all 3D views. See *Zoom Tools on page 30*.

Selecting **Window> Zoom In** , **Zoom Out**  or **Fill Window**  does not change the camera's location or field of view. Instead, the extents of the view are expanded or cropped.

FIELD OF VIEW

The Field of View refers to a camera's field of vision. A wider field of view makes the focal point appear further away, as more of the image is included in the same view window.

In plan view, the angled lines of a camera symbol indicate its field of view.

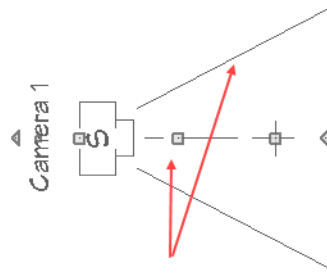

Field of View (FOV) Indicators

A camera's field of view can be adjusted in the Camera Specification dialog. See *Camera Specification Dialogs on page 73*.

RESET SAVED CAMERA

If you open a saved camera, overview, or cross section/elevation view and then change the position, direction, or any other attribute of the view, you will be prompted to either restore the original attributes or save the current settings when you close the view. See *Saving 3D Views on page 72*.

You can also restore its original attributes at any time prior to closing the view using the Reset Saved Camera tools. Select **3D> Camera View Options** to access these tools.




Reset Saved Camera (All) resets all changes made to the attributes of the current view.



Reset Saved Camera (Position) resets changes to the camera's position and orientation but leaves other attributes as they are.

Virtual Reality

 The Virtual Reality option is available in the Windows version of Chief Architect and allows you to view a plan in 3D using a VR headset. To view a model in VR, select **3D> Virtual Reality** while a Perspective camera view or overview is active.

SYSTEM REQUIREMENTS

The following virtual reality headset models are supported for use in Chief Architect:

- Oculus: Rift, Rift S, Quest (using Link Cable), Quest 2 (using Link Cable)
- HTC: Vive, Vive Pro, Vive Pro 2, Vive Cosmos, Vive Cosmos Elite, Vive XR Elite with a Vive Streaming Cable
- Valve Index
- Microsoft Mixed Reality

In order to run Virtual Reality in Chief Architect, your computer should meet not only the program's system requirements but also the system recommendations provided by your VR headset manufacturer.

In addition, you must first install Steam, a game and software distribution program available at store.steampowered.com.

Once it has been installed, you must also run the SteamVR Setup so that your headset runs through the Steam software. The setup will walk you through setting up the VR sensors in a clear area, free from obstructions, where you can walk and move around.

Virtual Reality can only be activated while viewing an active Perspective View using the Standard Rendering Technique. If Hand Drawn Lines on Top is in use in the current view, it will be ignored in VR. See *Rendering Techniques on page 79*.

SAFETY CONSIDERATIONS

Virtual Reality should only be run in a space free of obstructions that could cause injury.

To avoid slow performance that could result in motion sickness, turn off any other GPU intensive applications on your system before launching Virtual Reality. Particularly if your system has a high resolution display, use Super Resolution in the current camera view to improve performance prior to launching Virtual Reality. You can also use Super Resolution on systems with a regular monitor; however, you may notice decreased rendering quality. See [Super Resolution on page 78](#).

In addition, these settings are recommended in the current camera view prior to launching Virtual Reality:

- Turn Reflections off.
- Turn on a minimal number of lights and shadows.

See [Camera Specification Dialogs on page 73](#).

Just like in a Chief Architect camera view, it is possible to navigate through objects in the model when in Virtual Reality, like walls and furniture. To avoid disorientation or motion sickness, you should avoid doing so.

To avoid motion sickness while using virtual reality, gamepad style controllers are not supported. You can, however, walk within the area designated during your Steam VR Setup. To navigate to different locations in the model, you can also teleport as well as switch between Room View and Overview modes.

ROOM VIEW AND OVERVIEW MODES

Chief Architect has two Virtual Reality modes:

- In a Room View, you can navigate a model by looking around, walking, and teleporting. Room View is active when you enter VR from a Perspective Camera view.
- In an Overview you can move and rotate the model in order to examine its exterior. Overview mode is active when you enter VR from a Perspective Overview.

In both modes, your initial position and orientation in Virtual Reality are based on the position and angle of the camera. As you turn your head or walk, the view seen in the VR headset will update to reflect your movements. The original camera in Chief Architect will be unaffected, however.

Once you enter Virtual Reality, you can switch between the two modes:

- To transition from Room View to Overview, point either VR controller straight up until the Teleport Line changes to a short gray line. Press and hold the Transition button on your VR controller until the line changes entirely to the Mode Transition Color and the controller vibrates, then release the button. See [Virtual Reality Dialog on page 70](#), below.
- To transition from Overview to Room View, point either VR controller toward a valid surface on the model. Press and hold the Transition button until the line changes entirely to the Mode Transition Color and the controller vibrates, then release the button.

NAVIGATING ROOM VIEWS

In a Room View, you can explore a model by looking around, walking in your predefined VR space, and teleporting.

To teleport to other locations within the model, press and hold the Trigger on your VR controller while aiming at a suitably flat surface. A Teleport Marker will appear at the location that you point at, and releasing the Trigger will teleport you to that location.

In Room View, the VR controller projects a Teleport Line that indicates whether a targeted surface is a valid location to teleport to. A valid surface is defined as any surface that has less than 45° pitch, however if a valid surface exists less than

12” below an invalid target location, it will show as valid and the teleport marker will be placed next to the targeted surface. This allows you to easily teleport next to an otherwise invalid surface, such as a wall or cabinet.

To cancel a teleport action, aim the Teleport Line at an invalid location. When the line changes color and the Teleport Marker disappears, release the Trigger.

In Room View, a number of navigation actions can be completed using your VR controller. These controls are the same on both right and left controllers, but specific functions differ slightly depending on the VR controller used.

Command	HTC Vive/Microsoft	Oculus Rift
Teleport	Trigger	
Undo	Trackpad Left	Thumbstick Left + Click
Redo	Trackpad Right	Thumbstick Right + Click
Reset	Menu Button	Thumbstick Up + Click
Transition	Trackpad Down	X or A Button
Update Lighting	Trackpad Upper Click	Y or B Button

NAVIGATING OVERVIEWS

In Overview mode, you can examine and model by moving and rotating it in front of you as if holding a scaled version of the model.

In this mode, the Grip buttons on your VR controller allow you to “grab” and rotate the model. Using the Grip buttons on both VR controllers simultaneously gives a more natural rotation, as if grabbing and rotating the entire model.

Pressing and holding the Trigger allows you to drag the model in any direction: up, down, left, right, towards you, and away from you.

Pressing the Triggers while holding the Grips on both controllers simultaneously allows you to zoom in and out. Moving your hands apart will zoom in to the model, moving them closer together will zoom out.


In Overview mode, a number of actions can be completed using your VR controller. These controls are the same on both right and left controllers, but specific functions differ slightly depending on the VR controller used.

Command	HTC Vive/Microsoft	Oculus Rift
Rotate	Grip	
Drag	Trigger	
Zoom	Grip + Trigger	
Undo	Trackpad Left	Thumbstick Left + Click
Redo	Trackpad Right	Thumbstick Right + Click
Reset	Menu Button	Thumbstick Click
Transition	Trackpad Down	X or A Button
Update Lighting	Trackpad Upper Click	

VIRTUAL REALITY DIALOG

To view a model in VR, select **3D> Virtual Reality**  while a Perspective Camera view or Overview is active. The Virtual Reality dialog will open.

Note: Neither Hand Drawn Lines on Top nor GPU Ray Tracing are supported in VR.

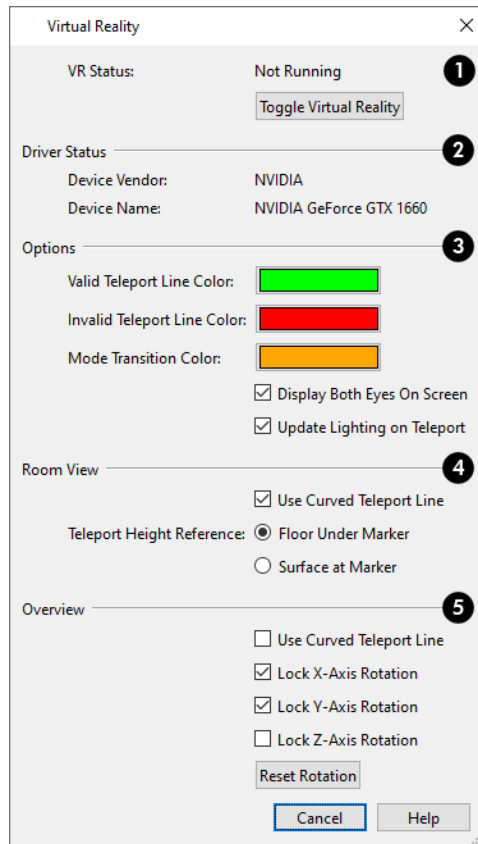

1 VR Status

The current **Virtual Reality Status** is stated at the top of the dialog, along with information about graphics card or chipset being used on the computer.

- Click the **Toggle Virtual Reality** button to turn Virtual Reality on or off.

2 Driver Status

Information about your graphics card is displayed here for reference. Visit chiefarchitect.com for information about system requirements.

3 Options

- Validity of a surface is indicated by the color of the teleport line. The **Valid Teleport Line** and **Invalid Teleport Line Colors** can be set here.
- The teleport line will display the **Mode Transition Color** when switching between Room View and Overview Modes. This color can also be set here.
- When Virtual Reality is active, the program window shows what the user sees in the VR headset. By default, both eyes' views are shown in a split screen. If you would prefer to see only the left eye's view, uncheck **Display Both Eyes On Screen** in the Virtual Reality dialog.

- When **Update Lighting on Teleport** is checked, the lighting in the model will update when you teleport more than 10 feet (3 m) to ensure that your destination has lighting. Uncheck this if you prefer to only update lighting manually using the controller.

4 Room View

Specify how the teleport feature works in **Room View** Mode.

- **Use Curved Teleport Line** changes the teleport line from a straight line to a curved arc. This is checked by default for Room Views.
- The **Teleport Reference Height** setting determines how the camera height is calculated when the teleport feature is used.
- When **Floor Under Marker** is selected, the new camera position will calculate its height based on the floor surface, or the floor directly beneath where the teleport marker lands if locating a raised surface such as a countertop or table. This may result in being teleported inside furniture or other objects.
- When **Surface at Marker** is selected, the new camera location will determine its height from the surface where the marker landed. This will place the camera on top of objects such as furniture and may result in the view being in or above the ceiling.

5 Overview

Specify how the teleport feature works in **Overview** Mode.


- **Use Curved Teleport Line** changes the teleport line from a straight line to a curved arc. This is unchecked by default for Overviews.
- **Lock X-Axis Rotation** prevents the model from being tilted vertically.
- **Lock Y-Axis Rotation** prevents the model from being rolled left to right.
- **Lock Z-Axis Rotation** prevents the model from being spun horizontally.

When Virtual Reality is active, neither the camera nor the model can be edited in any way. If you wish to make modifications, you must **Toggle Virtual Reality** off in the Virtual Reality dialog, make the necessary adjustments, and then enter Virtual Reality again.

Saving and Printing 3D Views

3D camera views, overviews, and cross section/elevation views can be saved with the plan in which they are created, exported and saved as image files, as well as printed.



SAVING 3D VIEWS


 Select **3D> Save Active Camera** to save the current camera in the plan. You can also save a camera view by checking the **Saved** box in the Camera Specification dialog. See *Camera Specification Dialogs on page 73*.

In addition, if Text objects are drawn in a cross section/elevation view, you will be prompted to save the view when you close it. Any Text objects added to a cross section/elevation view are saved with the view as part of the plan file.

ACTIVATING SAVED VIEWS

There are several ways to open a saved 3D view:

- Select the camera symbol in plan view and click the **Open View**  edit button.
- Right-click on the camera symbol in plan view and select **Open View**  from the contextual menu.

- Double-click the camera symbol using the **Select Objects**  tool.

Unsaved cameras that are open in another view window can also be activated using the **Open View**  edit button.

If you open a saved camera view and then modify its location or direction using any of the tools available in that view, the program will confirm whether you want to re-save the camera using these new settings when you close it. See *Navigating in Camera Views on page 60*.

EXPORTING 3D VIEWS



All 3D views can be exported and saved as .bmp, .jpg, .png, .tif, or .webp files. Select **File> Export> Picture** to save the current screen image as an image file. See *To export a picture on page 20*.

In addition, Vector Views can be exported and saved as .emf files. See *Exporting Metafiles on page 20*.

Once saved, a picture can be opened and converted into many other formats using a graphics program.

PRINTING 3D VIEWS



Since all 3D views other than Vector Views are created using pixels instead of lines, **File> Print> Print Image** must be used when printing. Print Image is a special Chief Architect function that prints the screen in picture format.

CLOSING 3D VIEWS

Although you can have any number of 3D views open at a time, to conserve resources on your computer it is a good idea to close views when you no longer need them. There are a number of different ways to do this. See *Closing Views and Files on page 32*.


Camera Specification Dialogs




The Camera Specification dialog can be accessed in plan view by selecting one or more camera symbols and clicking the **Open Object** edit button. See *In Plan View on page 58*.



This dialog can also be accessed while a camera view or overview is active by selecting **3D> Edit Active Camera**.

The settings in this dialog may vary somewhat depending on the tool used to create the selected view. This tool name is indicated in the dialog's title bar: the specification dialog for a **Full Camera** , for example, is named Full Camera Specification. See *3D View Tools on page 55*.

The settings in this dialog are also found in the Camera Defaults dialogs for each of the camera tools. See *Camera Defaults Dialogs on page 54*.

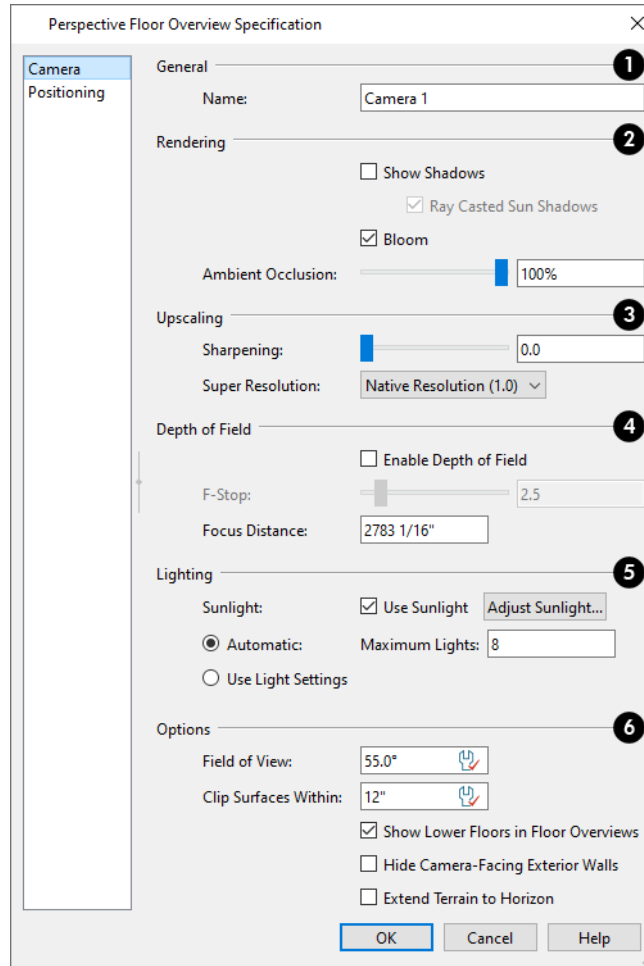

1 General

- Specify a **Name** for the camera that displays in its label in plan view. Names must be unique.

2 Rendering

- Check **Show Shadows** to turn on shadows in the selected camera view. When unchecked, shadows are not generated.
 - Check **Ray Casted Sun Shadows** for higher quality shadows cast by sunlight. Ray Casted Sun Shadows take longer to generate than regular shadows and only refresh when the camera is not moving.
- Check **Reflections** to turn on reflections in the selected camera view. When unchecked, reflections are not generated. See *Rendering Effects on page 78*.
- Light **Bloom** occurs around areas of intense illumination and looks as though the light is ‘bleeding’ beyond the edges of the light source. It adds realism to the view but can take longer to render. Only affects Standard renderings. See *Rendering Techniques on page 79*.
- Select the amount of **Ambient Occlusion** in the view using the slider bar or text field. Ambient Occlusion allows variation in the strength of the ambient light in Standard renderings. It is more realistic than uniform ambient light, but can take longer to render.

3 Upscaling

These settings allow you to improve rendering performance on systems with high resolution monitors. These options are not

used in line-based Rendering Techniques. See [Super Resolution on page 78](#).

- Specify the level of **Sharpening**, which affects how sharp or soft textures appear in the current view.
- **Super Resolution** refers to a technique that renders at a lower-than-native resolution and then upscales the result. On high resolution displays, these options improve performance without noticeably affecting quality.
 - The scaling factor used by each option is listed after its name: the higher the factor, the greater potential for both performance improvement and reduced quality.
 - Only "Native Resolution" is recommended on regular resolution monitors, as noticeable quality loss may occur otherwise.

4 Depth of Field

These settings allow you to add blur to objects that are not in focus in the current Standard, Vector View, or Glass House rendering.

- Check **Depth of Field Enabled** to enable the settings below and add blur to out-of-focus objects.
- Set the **F-Stop** using the scroll bar or text field. A low value increases blur while a high value reduces blur.
- Specify the **Focus Distance**, which is the distance from the camera at which objects are in focus and no blur occurs. Objects closer to the camera than this distance are subject to blur, as are those further away from the camera.

5 Lighting

These settings control which and how many light sources are used in the current view. See [Lighting Modes on page 79](#).


- When **Use Sunlight** is checked, the sun light source is on in the current view. Uncheck this box to toggle sunlight off.
- Select **Automatic**, then specify the **Maximum Number** of lights that can be used in the current camera view.
- Select **Use Light Settings** to use all light sources in the entire plan.

6 Options

- The **Field of View** defines the camera's field of vision in angular degrees. See [Field of View on page 67](#).
- **Clip Surfaces Within** - Objects located within this distance from the camera do not display in the view. Decrease this value to display objects located close to the camera; increase it to improve the appearance of some surfaces in Overview cameras with very large extents.
- Uncheck **Show Lower Floors** to show only the current floor in the selected Floor Overview. When checked, the current floor plus any floors beneath it are included in the view. Only available for Floor Overviews. See [Floor Overview on page 56](#).
- Check **Hide Camera-Facing Exterior Walls** to suppress the display of any exterior walls that face the camera, along with objects mounted, inserted, or snapped to such walls. Interior Attic walls are also suppressed. This setting only has an effect when the selected camera's position is on the exterior of a structure and also has an associated toggle. See [Hide Camera-Facing Exterior Walls on page 78](#).
- Check **Extend Terrain to Horizon** to create a virtual extension of the Terrain Perimeter in camera views that appears to extend to the horizon. This setting only has an effect if a Terrain Perimeter is present.

POSITIONING PANEL

Only the X and Y Position settings are available in the Cross Section/Elevation Specification dialog. See [Cross Section/Elevation Specification Dialogs on page 76](#).

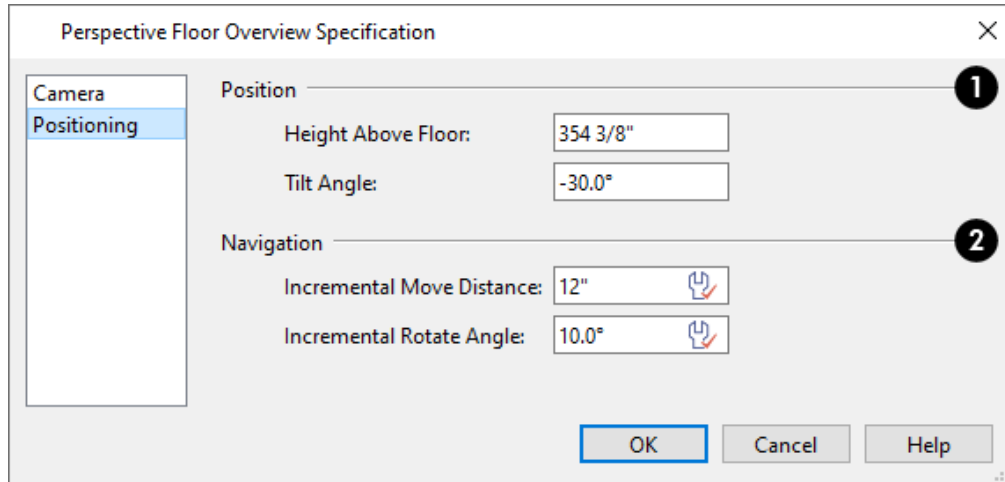

1 Position

These settings determine the position and orientation of the camera. Only the Height Above Floor and Tilt Angle are available in the Camera Defaults dialogs. See [Navigating in Camera Views on page 60](#).


- The **Height Above Floor** defines the height that the camera is above the floor level for the current floor. See [Camera Height on page 56](#).
- The **Tilt Angle** determines the vertical angle that the camera is tilted. The camera maintains its focal point and position in plan view, but if the camera is tilted, the focal point is above or below the current camera height.


2 Navigation

These settings control how the camera is affected when you navigate using the mouse. See [Move Camera with Mouse on page 61](#).


- The **Incremental Move Distance** controls how far the camera moves each time you Pan in any direction or Dolly forwards or backward using the keyboard, toolbar buttons, or menu. For interior views a small number is good, but for exterior you may want a larger increment.
- The **Incremental Rotate Angle** defines how many degrees the camera rotates each time you Tilt, Orbit, or Dolly side to side using the keyboard, toolbar buttons, or menu. A setting of 90° would make one full rotation in four moves.

Cross Section/Elevation Specification Dialogs

 The Cross Section/Elevation Specification dialogs can be accessed in plan view by selecting one or more cross section/elevation camera symbols and clicking the **Open Object** edit button. When a Wall Elevation camera is selected, the similar Wall Elevation Specification dialog opens instead. See [In Plan View on page 58](#).

 This dialog can also be accessed while a cross section/elevation camera view is active by selecting **3D> Edit Active Camera**.

Most of the settings in this dialog are also found in the Cross Section/Elevation Defaults dialog. See [Camera Defaults Dialogs on page 54](#).

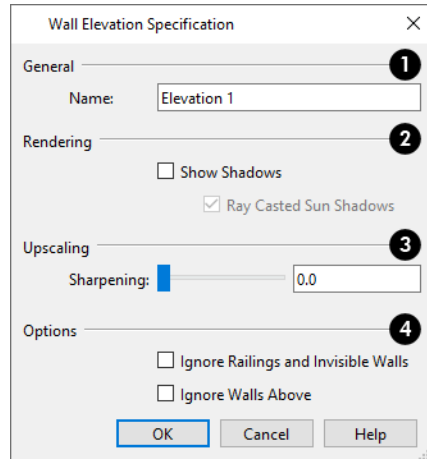

1 General

- Specify a **Name** for the camera that displays in its label in plan view. Names must be unique.

2 Rendering

- Check **Show Shadows** to turn on shadows in the selected camera view. When unchecked, shadows are not generated. See [Shadows on page 78](#).
- Check **Ray Casted Sun Shadows** for higher quality shadows cast by sun light. Ray Casted Sun Shadows take longer to generate than regular shadows and only refresh when the camera is not moving.

3 Upscaling

See [Super Resolution on page 78](#).

- Specify the level of **Sharpening**, which affects how sharp or soft textures appear in the current view. In cross section/elevation views, this option only affects views using the Standard Rendering Technique. See [Rendering Techniques on page 79](#).

4 Options

- These settings are only available for Wall Elevation views.
 - Check **Ignore Railings and Invisible Walls** to ignore the room definition created by these types of walls in a selected view. When this is unchecked, only room definition created by regular walls is recognized.
 - Check **Ignore Walls Above** to prevent any walls located above the selected camera's room from displaying in the view. This option typically has an effect only when the camera's room has Flat Ceiling Over This Room unchecked, or the room above has Floor Under This Room unchecked, in the Room Specification dialog.

3D Rendering

Chapter 8

There are a variety of tools available to create 3D views of a model: simply click a button to create an overview, or click and drag to create a camera or cross section/elevation view. See [3D Views on page 54](#).

Rendering Effects

There are a variety of factors which affect the appearance and quality of rendered 3D views. These options may also affect program performance.

SUPER RESOLUTION

In some cases, rendering large and complex scenes can be time-consuming. On systems with high resolution monitors (ex. 4k or Retina), you can reduce rendering time without noticeably impacting quality using **Super Resolution**, which renders scenes at a lower-than-native resolution to shorten rendering time and then scales the result up again. On regular, lower resolution monitors this typically results in decreased quality; however, on high resolution displays the change in quality is considerably less pronounced.


Super Resolution can be specified in camera views and overviews, but not elevation views. See [Camera Specification Dialogs on page 73](#).

Super Resolution is only used in the Standard Rendering Technique. See [Rendering Techniques on page 79](#).

SHADOWS



Shadows have an important effect on image quality.

Shadows are enabled in Full Camera views by default. You can, however, check or uncheck **Show Shadows** in the defaults dialog for any camera tool or in the. In addition, you can select **3D> Camera View Options> Toggle Shadows**  in any camera view. See [Camera Specification Dialogs on page 73](#).

HIDE CAMERA-FACING EXTERIOR WALLS



Occasionally, it can be very helpful to view the interior of a structure from an exterior view. To achieve this, create an exterior camera view or overview and select **3D> Camera View Options> Hide Camera-Facing Exterior Walls**.

This option is view-specific and can also be set in the Camera Specification dialog. See [Camera Specification Dialogs on page 73](#).

This setting also hides:

- Interior walls set as Attic walls;
- Wall or Full Height cabinets snapped to a hidden wall;
- Symbol objects such as electrical fixtures mounted on a hidden wall;
- Doors and Windows inserted into a hidden wall: even if Display Openings Independent of Walls and Roofs is checked in the 3D View Defaults dialog.

Lighting Modes

By default, cameras use an Automatic Lighting Mode that allows a set number of lights to illuminate the view. This number can be specified in the Camera Specification dialog. See [Camera Specification Dialogs on page 73](#).

If more than the set number of lights are present, lights are prioritized in this order:

- Lights in the same room as the camera before those in different rooms.
- Higher intensity lights before lower intensity lights.
- Lights closer to the camera before those further away.


Regardless of their intensity or proximity to the camera:


- Interior lights are not used in exterior camera views.
- Exterior lights are not used in exterior camera views when the Sunlight is toggled on.
- Lights on floors above the camera are not used in Floor Overviews. See [3D View Tools on page 55](#).

The Automatic Lighting Mode is useful because it is an easy way to produce reasonable lighting without taxing your video memory.


An alternative to the Automatic Lighting Mode is the **Use Light Settings** option. When **Use Light Settings** is selected, all lights in the current plan that are turned On are used in 3D views. This gives you control over which lights are used as light sources but may require more resources on your system.

Rendering Techniques

 Any camera view, cross section/elevation view, or overview can be generated using one of several Rendering Techniques to produce views for a range of different purposes. To access these tools, while a 3D view is active, select **3D> Rendering Techniques**, then select one of the techniques listed below.

 The Watercolor technique requires more time to generate than other Rendering Techniques. To save time, adjust the camera's perspective before using one of these techniques. See [Editing 3D Views on page 66](#).


STANDARD RENDERING


 Standard rendering is a photo-realistic technique that represents materials using textures, models lighting and shadows, and can also display reflections. Surface edge lines are not drawn and no special colors or effects are applied.



In plan view, the camera symbol for a view using the Standard technique displays an S in its center. See [Displaying 3D Views on page 58](#).


VECTOR VIEW


 In Vector Views, surface edge lines are drawn and pattern lines and colors are used to represent materials while textures are not. Shadows are supported, and when in use a single light source is used to produce them. Shading Contrast can be applied to surfaces, but other special colors or effects are not.

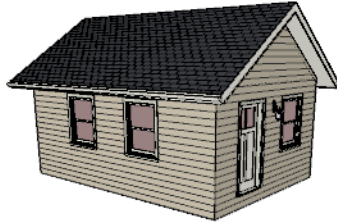

In plan view, the camera symbol for a view using the Vector View technique displays a V in its center.


GLASS HOUSE

 Glass House rendering uses different shades of a single color to display the model with surface edge lines and semi-transparent surfaces. Lighting and shadows are not modeled, and materials are not represented, so neither pattern lines nor textures are used.

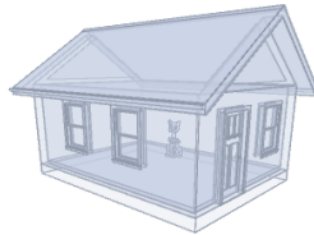

In plan view, the camera symbol for a view using the Glass House technique displays a G in its center.

Rendering Technique Options

 The settings in the Rendering Technique Options dialog allow you to control the specific effects of each rendering technique on an active 3D view. To access this dialog, create a camera view, elevation view, or overview and select **3D> Rendering Techniques> Technique Options**.


In the Rendering Technique Options dialog, select a technique from the list on the left to make its options active on the right. When this dialog is first opened, the technique currently used by the view is selected.

As changes are made in the Rendering Technique Options dialog, the 3D view automatically updates to reflect those changes.

STANDARD PANEL

 When this panel is selected, the active view uses the Standard Rendering Technique. See *Standard Rendering on page 79*.

There are a variety of other tools that affect the appearance of Standard rendered views, as well. See *Displaying 3D Views on page 58*.

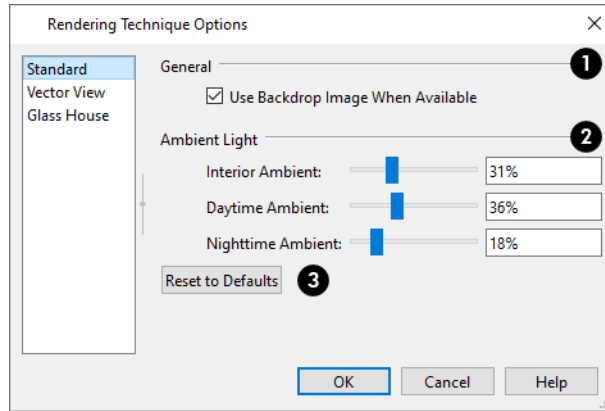

1 General

- When **Use Backdrop Image When Available** is checked, the backdrop image specified for this view is used. When unchecked or if no backdrop image is specified for the current view, a solid color is used instead.

2 Ambient Light


Ambient lighting simulates the way light bounces around a scene, producing a basic level of uniform illumination on all surfaces. Specify the amount of Ambient light to use in Standard renderings.

- **Interior Ambient** affects interior views.
- **Daytime Ambient** affects exterior views.
- **Nighttime Ambient** affects nighttime exterior views.


3 Reset

- Click **Reset to Defaults** to restore the default settings used when the Standard technique was first enabled.

VECTOR VIEW PANEL

 When this panel is selected, the active view uses the Vector View Rendering Technique. See *Standard Rendering on page 79*.

There are a variety of other tools that affect the appearance of Vector Views. See *Displaying 3D Views on page 58*.

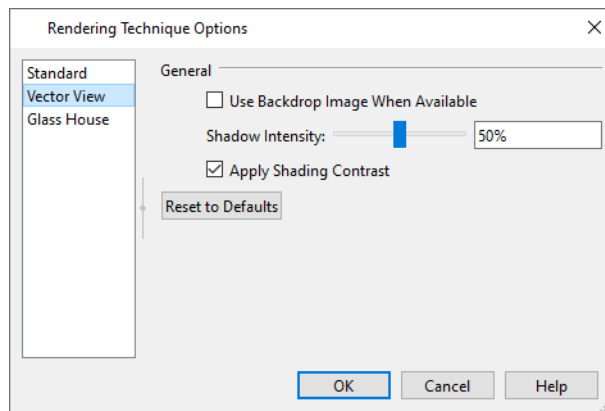


- Check **Use Backdrop Image When Available** to use the backdrop image specified for this view. When unchecked or if no backdrop image is specified for the current view, a solid color is used instead.
- Specify the **Shadow Intensity**, which is how dark or light shadows appear. A value of 100% creates shadows that hide any objects located within them; a value of 0% effectively produces no shadows.
- When **Apply Shading Contrast** is checked, different levels of shading is used on surfaces oriented at different angles in the model. Uncheck this box to use unmodified material Colors on all surfaces, regardless of the angle.
- Click **Reset to Defaults** to restore the default settings used when the Vector View technique was first enabled.

GLASS HOUSE PANEL



When this panel is selected, the active view uses the Glass House Rendering Technique. See [Glass House on page 80](#).

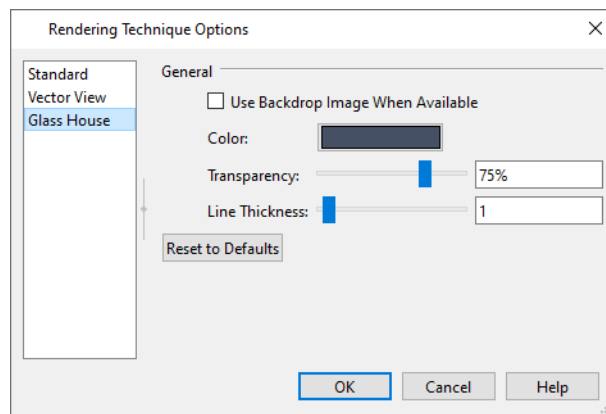

- When **Use Backdrop Image When Available** is checked, the backdrop image specified for this view is used. When unchecked or if no backdrop image is specified for the current view, a solid color is used instead.
- Click the **Color** bar to select a color for the semi-transparent surfaces and lines in a Glass House view. See [Select Color Dialog on page 36](#).
- Specify the **Transparency** of the surfaces in Glass House view. For example, to create a wireframe line drawing of your structure, turn transparency to full and minimize line thickness.
- Specify the **Line Thickness** of surface lines in Glass House view.
- Click **Reset to Defaults** to restore the default settings used when the Glass House technique was first enabled.

Printing

Chapter 9

Chief Architect Viewer provides a variety of options for printing scaled plan views, elevation views, and 3D perspectives and layout pages, allowing you to print up to 11" x 17" in size.

You can also save your drawings in **.pdf** file format that can then be sent to a printing service.

Note: Screen captures are provided for illustrative purposes only and are not an endorsement of any products.

The Printing Tools



Select **File> Print** to view the Print Tools submenu.



Print Preview - Shows on screen how the current view will appear printed, based on the current scale and other settings. See [Print Preview on page 83](#).



Print - Prints the current plan view, Vector View, or layout sheet to a specified scale. See [Print View Dialog on page 85](#).



Print Image - Prints the current view including images, textures, and backdrop. Views printed with Print Image are not scaled. See [Print Image Dialog on page 87](#).



You can also select **File> Export> Export PDF** to open the Export PDF dialog. See [Print View Dialog on page 85](#).



Clear Printer Info - Some information specific to individual printers, such as available paper sizes, is saved with each file. This clears the printer-specific information associated with the current page setup.

Print Preview


Print Preview and its related display toggles allow you to get a sense of what the current view will look like when it is printed.

PRINT PREVIEW



Select **File> Print> Print Preview** for an on-screen representation of how the current view will appear when printed. Print Preview is only available in views that can be scaled.

Objects such as camera symbols, text and dimension objects appear on-screen as they will on the printed page.

When **Print Preview**  is enabled, color will display depending on whether **Print in Color** is selected in the Print View dialog. See [Print View Dialog on page 85](#).

The Reference Display does print if it is visible. See [The Reference Display on page 53](#).

COLOR



The **Color** toggle turns the on-screen display of color on or off in all views.

Printing Across Multiple Pages

When printing directly from a plan view, cross section/elevation view, or layout it is possible to print at a scale that does not fit the drawing on one page.

To see on-screen what the drawing will look like when printed, select **File> Print> Print Preview** and then **Window> Fill Window** . Grey lines across the drawing sheet indicate where the page breaks will occur. See [Print Preview on page 83](#).

To print across multiple pages

1. Select **File> Print> Print Preview** to display the white rectangle representing the printer paper. See [Print Preview on page 83](#).
2. Click the **Select Objects** button, then click near an edge of the printer paper rectangle to select it. When selected, the printer paper is highlighted in pale grey and a square Move edit handle displays at its center.
3. Click and drag the Move edit handle to position the printer paper so that the portion of your drawing that you would like to print on your first page is located within the printable area of the page.
4. Select **File> Print> Print** . In the Print dialog, make sure **To Scale** is selected, then click OK. See [Print View Dialog on page 85](#).
5. Select the printer paper rectangle and move it so that the desired contents of your second printed page are within the printable area and print **To Scale**.
6. Continue moving the printer paper and printing as needed.

When printing multiple pages, it is generally a good idea to leave some overlap on the edges of each page to make sure that information near those edges is not left off the printed pages by mistake.

Printing to a PDF File

Portable Document Format, or **.pdf** files, are one of the most universally compatible and efficient file formats and can be viewed and printed on most computer platforms.


You can save any view as a **.pdf** file by selecting “Chief Architect Save as PDF” or any other PDF writer installed on your system as the Destination printer **Name** in either the Print View or Print Image dialog. See [Print View Dialog on page 85](#) and [Print Image Dialog on page 87](#).

You can also print to **.pdf** from any view by selecting **File> Export> Export PDF** .

When you print to or export a **.pdf** file, you will be asked to either:


- Click the **Save as PDF** button to save the current print job as a **.pdf** file. When you click this, you will be prompted to give the file a name and select a save location on your system.
- Click the **Save to Project/Assets** button to save the current print job as a **.pdf** file and include it in either one of your Projects or Assets. See [Chief Architect Project Management](#).

Print View Dialog

 To print from plan view, 3D Vector Views, or layout, select **File> Print> Print**. The Print View or Print Layout dialog opens. The settings that are available will vary depending on which version of the dialog is open.

PDF Select **File> Export> Export PDF** to open the similar Export PDF dialog.

Note: 3D views that are not Vector Views can be printed using Print Image. See [Print Image Dialog on page 87](#).

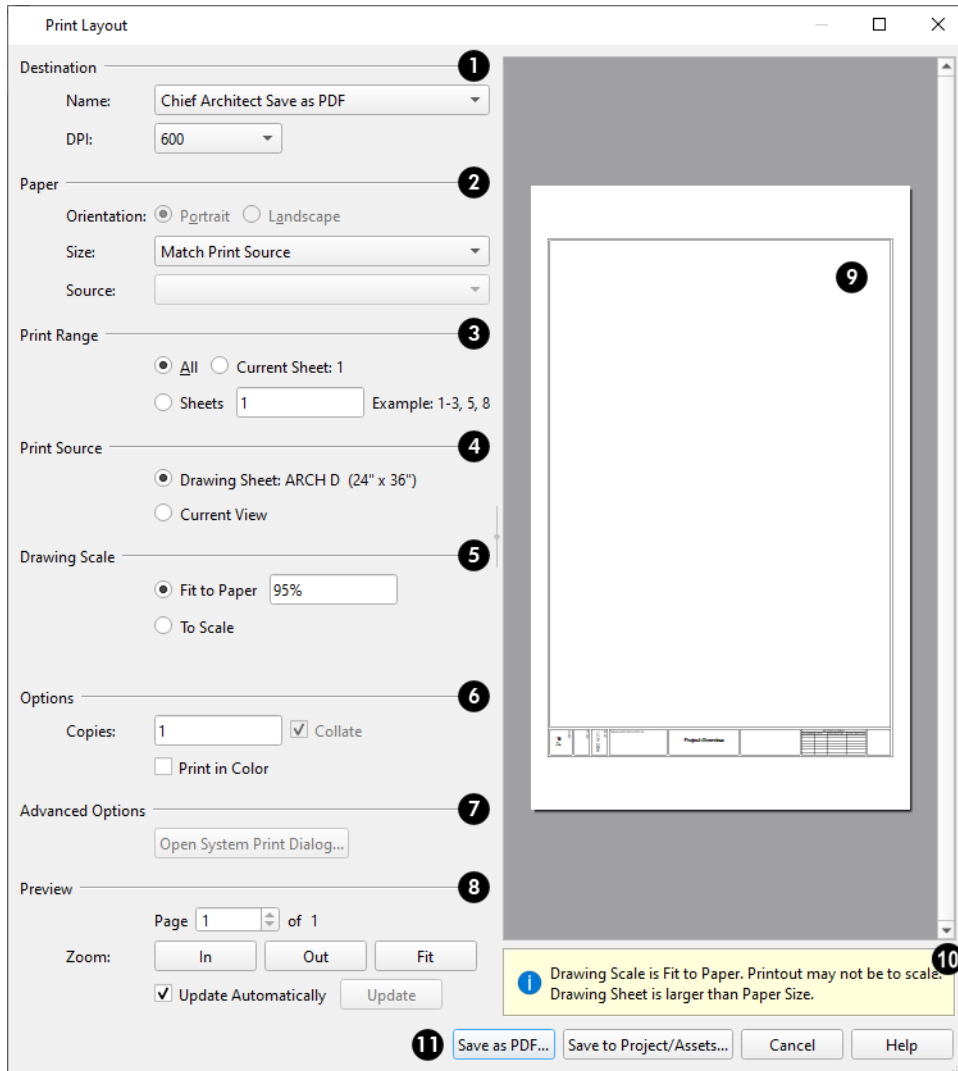

1 Destination

- Select the **Name** of the printer you would like to use from the drop-down list. To print to **.pdf**, select “Chief Architect Save as PDF” from the list, or choose a **.pdf** writer installed on your system. See [Printing to a PDF File on page 84](#).
- Select the **DPI**, or Dots Per Inch to use when printing, from the drop-down list. The available options may vary depending on the selected printer.

2 Paper

Select the **Paper Orientation**, **Size**, and **Source**. The available Size and Source options are controlled by the selected printer's driver.

- When "Match Print Source" is selected from the **Size** drop-down list, the Size as well as the Orientation use the current view's settings in its Drawing Sheet Setup dialog.

3 Print Range

In layout files only, specify the range of pages to print. Only pages that have views or objects drawn directly on them will print.

- Select **All** to print the entire drawing.
- Select **Current Sheet** to print only the currently active layout page.
- Select **Sheets** to specify which layout pages to print, then type the page numbers you wish to print, separated by commas or by a dash. Not available in plan files.

4 Print Source

- Select **Drawing Sheet** to print the entire sheet even though you may be zoomed in on a portion of the view. This is selected by default when the Drawing Sheet is set to display in the current view.
- Select **Current View** to print only that portion of the active view that is currently visible on screen. If you are zoomed out, any blank space outside the printable objects in the view is ignored. This is selected by default when the Drawing Sheet is not displaying in the current view.

5 Drawing Scale

Changes to these options may cause the Paper Size to change, above. Not available in camera views or overviews.

- **Fit to Paper** prints the view on one page. The program uses whatever scale is necessary to fit the plan on one page.
 - When **Fit to Paper** is selected, specify the percentage of the paper to be used. The default value is 95%.

Note: The Fit to Paper percentage value is global - affecting all views in all files, and is retained between sessions.

- Select **To Scale** to print at the scale specified in the program in which the file was originally created.

6 Options

- Specify the number of **Copies** you would like to print.
 - When the number of Copies is 2 or greater, you can choose to **Collate** the pages. When this box is unchecked, copies of each page are printed as a group.
- Check **Print in Color** to print in color or clear the check box to print in either grayscale or black and white.

7 Advanced Options

Click the **Open System Print Dialog** button to close the Print View dialog and print using your operating system's Print dialog instead. Not available when No Printer is selected.

8 Preview

Control the appearance of the print job preview on the right side of the dialog.

- Specify the **Page** that displays in the Preview area.
- Click the buttons to **Zoom In**, **Zoom Out**, or **Fit** the selected Page to the extents of the Preview area.

- Uncheck **Update Automatically** to turn off the print job Preview and prevent it from updating as changes are made to the settings in this dialog.
- Click the **Update** button to update the print job Preview to reflect the current settings in this dialog. If Update Automatically is unchecked, clicking Update may force the Preview to be blank.

9 Preview Pane

- When **Update Automatically** is checked, a preview of the current print job displays here. The drawing sheet displays as a white rectangle, and if multiple sheets are required, you can scroll through them. If the print job is large, a progress dialog may display briefly as the preview draws or updates.

10 Information

To help prevent unwanted printed output, information messages regarding page size, resolution, and scale may display below the preview pane, depending on the settings in this dialog.

11 Print/Save

When the settings in this dialog meet your needs, you can print or save the current job.


- When a physical printer is selected as your Destination, above, click the **Print** button to print using the selected printer.
- When a PDF writer such as "Chief Architect Save as PDF" is selected as the Destination, you have two options:
 - Click the **Save as PDF** button to save the current print job as a **.pdf** file. When you click this, you will be prompted to give the file a name and select a save location on your system. See [Printing to a PDF File on page 84](#).
 - Click the **Save to Project/Assets** button to save the current print job as a **.pdf** file and include it in either one of your Projects or Assets. See [Chief Architect Project Management](#).

Print Image Dialog



Any view can be printed by selecting **File> Print Image**. This is the only way to print most 3D views. See [3D Rendering on page 78](#).

The Print Image dialog is similar to the Print View dialog; however, the printing process is different. **Print Image** prints individual pixels as opposed to vectors (lines).

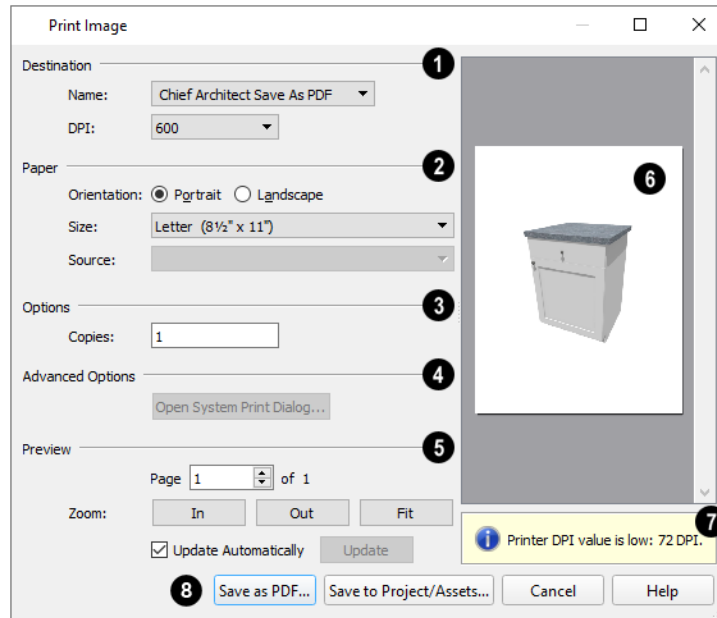

1 Destination

Select the Name of the **Printer** you wish to use from the drop-down list. To print to **.pdf**, select “Chief Architect Save as PDF” from the list, or choose a **.pdf** writer installed on your system. See [Printing to a PDF File on page 84](#).

2 Paper

Select the **Paper Orientation**, **Size**, and **Source**.

3 Options

Specify the number of **Copies** you would like to print.

4 Advanced Options

Click the **Open System Print Dialog** button to close the Print View dialog and print using your operating system’s Print dialog instead. Not available when No Printer is selected.

5 Preview

Control the appearance of the print job **Preview** on the right side of the dialog.

- Specify which **Page** displays in the Preview area.
- Click the buttons to **Zoom In**, **Zoom Out**, or **Fit** the selected Page to the extents of the Preview.
- Uncheck **Update Automatically** to turn off the print job Preview and prevent it from updating as changes are made to the settings in this dialog.
- Click the **Update** button to update the print job Preview to reflect the current settings in this dialog. If Update Automatically is unchecked, clicking Update may force the Preview to be blank.

6 Preview Pane

When **Update Automatically** is checked, a preview of the current print job is displayed to the right. If the print job is large, a progress dialog may display briefly as the preview draws or updates.

7 Information

To help prevent unwanted printed output, information messages regarding page size and resolution may display here, depending on the settings in this dialog.

8 Print/Save

When the settings in this dialog meet your needs, you can print or save the current job.

- When a physical printer is selected as your Destination, above, click the **Print** button to print using the selected printer.
- When a PDF writer such as "Chief Architect Save as PDF" is selected as the Destination, you have two options:
 - Click the **Save as PDF** button to save the current print job as a **.pdf** file. When you click this, you will be prompted to give the file a name and select a save location on your system. See *Printing to a PDF File on page 84*.
 - Click the **Save to Project/Assets** button to save the current print job as a **.pdf** file and include it in either one of your Projects or Assets. See *Chief Architect Project Management*.

Index

- #
- 3D
 - Delete Surface 59
 - Mice 9
- 3D Views
 - Display 58
 - Floor Overview 56
 - Framing Overview 57
 - Full Overview 56
 - Overviews 55
 - Save 72
- A
- Align
 - Text 46
- Alphabets
 - International 38
 - Unicode 38
- Archive Files 24
 - Manage Auto Archives 24
- Arrow
 - Auto Positioning 48
- Auto
 - Archive 24
 - Save Files 25
- C
- Camera
 - Activating 72
 - Create Views 55
 - Defaults 54
 - Field of View 67
 - Move Tools 62
 - Move Up/Down One Floor 67
 - Orbit Tools 63
 - Specification Dialog 73
 - Tilt Tools 63
- Center
 - Text 46
- Change
 - Floor/Reference 53
- Close
 - Plans and Views 32
 - Program 26
 - Views 32
- Color
 - Off/On 35
- Compatibility
 - with other programs 18
- Contextual Menus
 - In Render views 67
- Copy/Paste
 - Main Edit Mode 47
 - Sticky Mode 47
- Cross Section/Elevation
 - Specification Dialog 76
- Cross Section/Elevation Views 57
- Cross Section/Elevations 55
- Crosshairs 10
- Current
 - Floor 52
 - Layout Page 15-16
- D
- Dashboard 5
- Defaults
 - Camera 54
- Delete
 - 3D Surface 59
- Dimensions
 - Tape Measure 16
- Display
 - 3D Views 58
- Dynamic
 - Print Preview 83
- E
- Edit
 - Handles 12
- Edit Active View 27
- Elevation Views 57
- Elevations
 - Interior 55
- Elevations, Wall 57
- Enhanced Metafiles 20
- Exit Program 26
- Export
 - Picture Files 19
- F
- F6 Key
 - Fill Window 31
- Field of View 67
- File
 - Management 18
 - Open 18
- Fill
 - Window 31
 - Window Building Only 31
- Floor
 - 3D Overview 55
 - Camera 55
 - Overview 55-56
- Floor Plan
 - View 14
- Floors
 - Change Floor/Reference 53
 - Current Floor 52
 - Floor Up/ Floor Down 52
 - Reference Floor 53
- Focus on Object 61
- Fonts 38
 - and Alphabets 38
- Framing
 - 3D Overview 57
- Full
 - Overview 55-56
- G
- Gamepad
 - Enable 64
- Gamepad Settings 64
- Gamepads 61
- Getting Help 16
- H
- Help
 - Tool Tips 16

I

Images
 Printing 87

L

Layer
 Layer Sets 35

Layout
 Current Page 15-16

Left Mouse Button
 Definition 8

Line
 Color 50
 Specification Dialog 49

Line Style 50
 Panel 49

M

Main
 Edit Mode 47

Manage
 Auto Archives 24

Menus 10

Metafile Size Dialog 20

Metafiles 20

Middle Mouse Button 9, 31

Mouse
 3D 9

Mouse Buttons
 Using 8

Move
 Camera with Mouse 61

O

Open
 Object 11
 Plan Files 18
 View 72

Overview 5
 Floor 56
 Full 56

P

Pan
 Pan Window Tool 32
 the Display 31
 Using the Keyboard 31
 Using the Mouse 31
 Using the Scrollbars 32

Paragraph Options Dialog 42

Paste 46

Paste Image 46

PDF
 Print to 84

Picture Files
 Export 19

Plan
 Files, Opening 18
 View 14

Pointer
 Crosshairs 10

Print 83
 Across Multiple Pages 84
 Clear Printer Info 83
 Color or Black and White 86
 Dialog 85
 Options 83
 Preview 83
 Tiled 84
 to PDF File 84

Print Image 73
 Dialog 87

Printers
 Select Printer 85

R

Redo 25

Referenced Plan Files Dialog 23

Render
 Tips 78

Rendering Techniques 79
 Defaults 80
 Options 80

Rich Text
 Specification Dialog 40
 Text Color 41

Right Button Definition 9

S

Save
 3D Views 72

Save Active View 27

Scrollbars 32

Section Views 57

Select
 Multiple Objects 44
 Next Object 43
 Next Object Tool 44
 Objects button 43
 Objects Tool 44
 Similar Objects 43

Select Color Dialog 36

Shadows 78
 Ray Casted 78

Specification Dialogs
 Camera 73
 Cross Section/Elevation 76
 Line 49
 Rich Text 40

Status Bar 13

Sticky Mode 47

Swap
 Views 28

T

Tab Key 43

Tape Measure 16

Text
 Aligning 46
 Arrows 48
 Bullets 43
 Creating 39
 Displaying 40
 Editing 44
 Layer 40
 Line Spacing 42
 Lists 43
 Move 45
 Numbering 43
 Paragraph Options 42
 Reshape 45
 Resize 45
 Rotate 45

Tiling Views 28

U

Undo 25
 Undo Zoom 30

V

Views
 Tiling 28

Virtual Reality 68

W

Wall
 Elevation 55

Wall Elevation 57

Windows Metafiles 20

Z

Zoom 30
 Fill Window 31
 Mouse Wheel 9, 31
 Tools 30
 Undo Zoom 30